1 Safety instructions

This chapter explains the installation of this printer, warning terms that operators need to know, caution items and warning labels on the printer main unit.



• When installing and operating this printer, be sure to follow the directions and warnings in this book.

1.1 Types and meanings of warnings

There are three steps of classification according to the degree of risk or accident for the warnings in the Operation Manual and warning labels attached to the printer itself.

Understand the meanings of the following warning terms and follow the contents (instructions) in this manual.

Warning	Meaning
• WARNING	Used for dangerous situations where death or serious injury may be caused.
A CAUTION	Used for dangerous situations that may cause slight or medium injury, or when all or parts of products are damaged.
NOTE	It is used for special cautions and for information that needs to be emphasized.

1.2 Important safety instructions

This section explains general cautions that must be followed in order to use this printer safely.





Do not install this printer in the following places.

It may cause an injury if the printer falls down.

- · On a shaky stand
- · Slanting location
- · Places where vibration of other machines etc. is transmitted



Do not stamp on this printer or place heavy things on top of it.

It may cause an injury if the printer falls down.



Do not block the vent by covering the printer with cloths, such as a blanket or tablecloth.

If the vent is blocked, heat may accumulate inside the printer and it may cause fire.



Do not install the printer where it is humid or dusty.

It could lead to an electric shock and fire.



Do not use a damaged power cable.

It could lead to an electric shock and fire.



Do not take out or insert the power plug with a wet hand.

This could lead to an electric shock.



Do not connect an earth wire to the following places.

· Gas pipe

There is a possibility of ignition and explosion.

- Earth wire of telephone cables and lightning rods
 Heavy current might flow whenever lightning strikes.
- Water pipe and faucet

The earth might not work if a plastic pipe is connected in the middle of the metal pipe.



Do not store combustible materials on the platen or media guide while performing the heater operation. It could lead to fire.



Do not spill flammable liquid over the platen or media guide.

This could lead to fire.



Do not insert or drop metal or flammable objects into the printer through openings such as a vent. It could lead to an electric shock or fire.



If foreign substances or liquids such as water entered the printer, do not use the printer as it is.

It could lead to an electric shock or fire.

Immediately turn OFF the power switch, disconnect the power plug from the electric socket, and contact your local MUTOH dealer.



Wire the various cords as directed in the Operation Manual.

Mistaken wiring could cause fire.



Be sure to use the power cable supplied with the printer.

Using other power cables can cause an electric shock or fire.



Make sure to use only the specified power supply (AC 100 V to 120 V or AC 220 V to 240 V).

If a power supply other than the specified voltage is used, it could cause an electric shock and fire.



Take power for the printer directly from the power socket (AC 100 V to 120 V or AC 220 V to 240 V).

Do not use multiple plugs on the same socket.

This could generate heat and might cause fire.



Be sure to use a dedicated power socket with earth wire for the power supply, and connect it to the earth wire. If the earth wire is not connected, an electric shock or fire may occur.



The waste fluid from the printer is industrial waste.

Proper waste fluid disposal according to industrial waste disposal laws and ordinances of your local government is required.

Consign disposal of waste fluids to a specialized processor.

A CAUTION



Pay attention to the following points when handling power cable.

- Do not do anything forcefully on the power cable.
- Do not put heavy objects on the power cable.
- Do not bend, twist or pull the power cable by force.
- Do not route the power cable near heating appliances.



Pay attention to the following points when handling the power supply plug.

Any mishandling of the power cable could cause a fire.

- Make sure that no foreign substances such as dust etc. are stuck to the power plug.
- Make sure that the power plug is firmly inserted to the edge of the power socket.



When handling ink packs, pay attention so that ink does not get into your eyes or stick to your skin.

If ink gets into your eyes or sticks to your skin, immediately wash it off with water.

Failing to do so might cause irritation or light inflammation of eyes.

In case of any abnormality, consult a physician immediately.



Do not disassemble the ink packs.

If disassembled, there is a possibility that ink might come into contact with eyes or skin.



Do not operate the media loading lever during initial operation.

The print head portion may touch the pressurizing roller portion, and cause a malfunction.



Do not touch the media guide during printing.

It is hot and may cause a burn.



Do not touch the media feed slot, platen or media guide while heaters are operating.

They are hot and may cause a burn.



Do not use volatile solvents such as thinner, benzene, or alcohol.

These solvents could cause damage to the paint.



Be careful that no moisture enters the printer.

There is a possibility that the electric circuit inside the printer is short circuited.



Do not open covers attached using screws under any circumstances.

This may cause an electric shock or a malfunction.



Do not drop waste fluid when replacing the flushing-box sponges.

If waste fluid comes into contact with the grid roller, the surface of the grid roller will be damaged, and the media feed function may be affected.



When cleaning the cleaning wiper

Do not touch the cleaning wiper and head cap unit.

Head cleaning may not be performed correctly because of oil from your hands.

Make sure to use a cleaning stick, and dip it in the specialized cleaning fluid (VJ-BIOINK1-CL), and then clean
the wiper.

Wipe it a fluid other than the specialized cleaning fluid can cause the print head to clog.

• Cleaning sticks can be used for about 1 week.

After 1 week, or when you cannot remove ink clumps, replace the cleaning stick.



When cleaning around the print head

- Do not touch the nozzle of the print head. Doing so may damage the print head.
- Do not touch the head of the cleaning stick.
 - Oil on your hands may attach to the cleaning stick, causing damage to the print head.
- Make sure to use a cleaning stick, and dip it in the specialized cleaning fluid (VJ-BIOINK1-CL), and then clean around the print head.

Wipe it a fluid other than the specialized cleaning fluid can cause the print head to clog.

• Cleaning sticks can be used for about 1 week.

After 1 week, or when you cannot remove ink clumps, replace the cleaning stick.



Do not slant the printer, prop it against a wall or turn it upside down.

There is a possibility that ink inside the printer may leak. Moreover, normal operation after shifting (to these positions) cannot be guaranteed.



• VJ-1618: four or more



When taking this printer out of the package box, make sure to remove the vinyl sheet and hold the handles on the side of the printer.

If the printer is lifted with the vinyl sheet attached, there is a possibility that the printer falls slipping from hands and gets damaged.



When you do not use the printer for a long period, make sure to pull out the power plug from the power socket for safety.



Make sure to connect an earth wire to the earth connection that meets the following standards.

- Earth terminal of power socket
- Earth wire with copper plate which is buried at 650 mm or more, deep in the ground.



Before performing work, make sure to read the safety data sheet (MSDS) included with the printer.



Keep the work area well-ventilated.

This prevents fire, and stops operators from feeling sick from bad air.



When printing is finished, the media guide is at high temperature.

Wait until the media guide cools off.



Pay attention to the following points when you cut roll media.

Mishandling the razor blade may cause a cut on your finger or hand.

- When you hold media, do not place your finger on the media cut groove.
- Move the razor blade along the media cut groove.



When cleaning the printer, be sure to turn OFF the power and disconnect the power plug.



Move the printer maintaining a horizontal position.

1.3 Warning labels

This section explains the handling of warning label, pasting location and types.

Warning labels are attached to parts of the printer that need special caution.

Understand the locations and the descriptions of the danger associated with each label before operating the printer.

1.3.1 Handling the warning labels

When handling the warning labels, be careful about the following points.




- Check whether all the warning labels can be read.

 If the letters or illustrations on the label are not clear, remove the dirt from the label.
- Use cloth, water and neutral detergent for removing dirt from the warning label. Avoid either organic solvents or gasoline.
- It is necessary to replace the labels if they are damaged, lost or illegible. If the warning labels have to be replaced, contact your local MUTOH dealer.


1.3.2 Location and type of warning labels

Pasting locations of the warning labels are shown in the following figure.

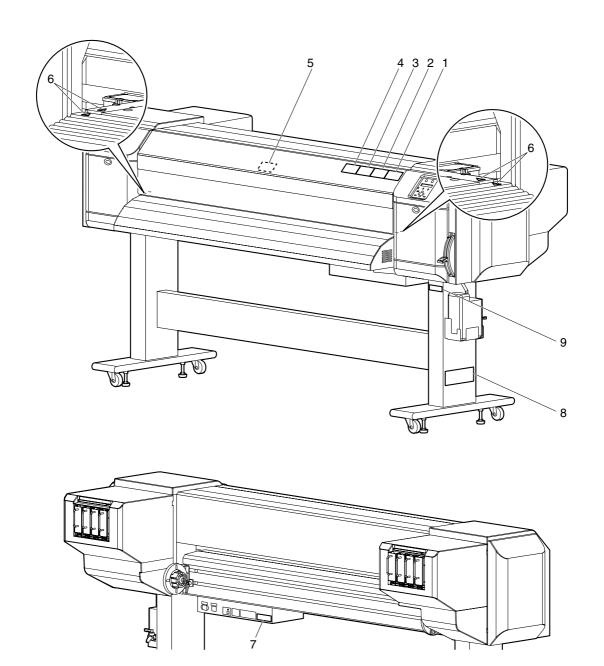

No.	Types of warning labels
1	
	⚠ CAUTION
	 Do not open the front cover while printing. Moreover. Do not touch the media while printing. Good printing result might not be obtained.
	 Please remove the media and hold the lever up when not using for a long time. Due to the environment conditions, media float and wrinkle might happen that does not obtain the good result.

No.	Types of warning labels
2	
	<u> </u>
	 ◆ Do not give a direct wind from a fan or air conditioner to the machine. ※ A wind may dry the ink in the head nozzles causing clogging that affects ink jetting,and you will not be able to obtain satisfactory printing results.
3	⚠ CAUTION
	Paper guides, platen and paper holding plate will become hot due to the heater temperature setting. Beware of being burned.
4	
	 CAUTION ◆ Normal cleaning should be done once a week if the printer is not used for a long period. ※ If the printer is left without cleaning, the ink will be hardened inside the head nozzle, and may cause the head trouble.

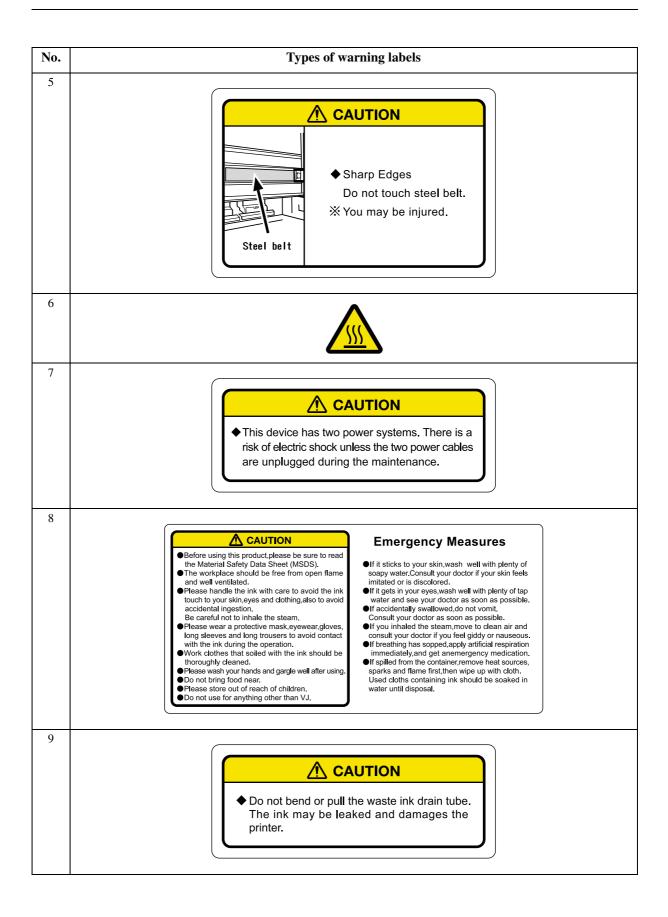

2 Product overview

This chapter explains the features of this printer along with the names and functions of each part.

2.1 Features

This section explains the main features of the printer.

(1) High-speed output

The new type print head achieves high-speed output. It is compatible with media up to 1,615 mm in width.

(2) Wide variety of compatible media

The head is adjustable to two levels of height and compatible with media between 0.08 mm and 0.3 mm in thickness.

(3) Vibrant color reproduction

Four colors of ink are used for printing in order to reproduce sharp and vivid colors. This printer uses 880 ml of large capacity bio ink pack with a dedicated S/C card. This ink pack can control ink quantity for printing, improving productivity. Use of variable dots can also improve color reproduction.

(4) Multi-heater

The media heating system developed for PJ-NX series is arranged for bio ink. Heaters are installed at three locations (Pre Heater, Platen Heater, Drier) allowing bio ink to fix better on media and dry quickly.


(5) Effective use of media

A JOG feature is provided to allow setting of the print starting position as required. Printing can be performed on media that has already been printed on. This allows effective use of left margins.

2.2 Names of parts and functions

This section explains the names and functions of each part.


2.2.1 Front section

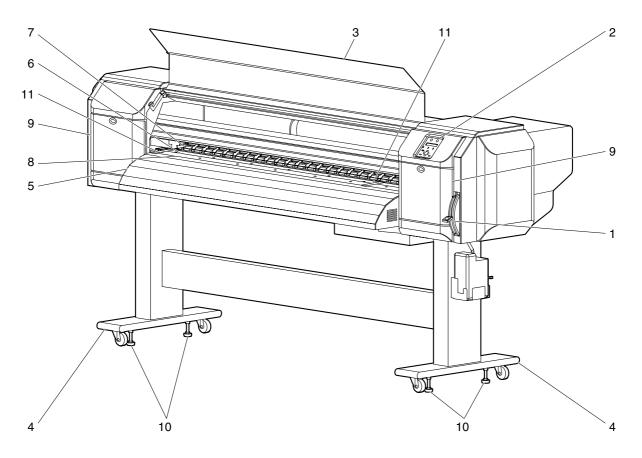

No.	Name	Function
1	Media loading lever	Used for fixing or releasing media. Lower the lever to fix the media. Lower the lever more to fix the media firmly. Used to improve the accuracy of media feeding. Raise the lever to release the media.
2	Operation panel	Operation condition setting, printer display and various function settings are performed. 127 2.2.3 Operation panel
3	Front cover	Used for preventing a user from coming in contact with the driving mechanism during the printer operation. Opened and closed when media is set or jammed. It is normally closed.
4	Stand	Used when installing the printer on a level floor.
5	Media guide	Used for feeding media smoothly when the media is set or printed. The heater (drier) to dry ink is installed.

No.	Name	Function
6	Platen	Installed inside of the front cover. The heater (platen heater) to dry ink is installed.
7	Pressurizing rollers	Installed inside of the front cover. Press and hold the media when printing.
8	Media cut groove	Installed inside of the front cover. Used to cut media straight.
9	Maintenance cover	Used to prevent the user from touching the inner mechanical section. Open and close in the following cases. • When cleaning the cleaning wiper • When cleaning around the print head It is normally closed.
10	Adjuster	Used to install the printer horizontally.
11	Media holder plate	Installed inside of the front cover. By attaching media holder plates to both sides of the media, it is possible to prevent warpage.

2.2.2 Rear section

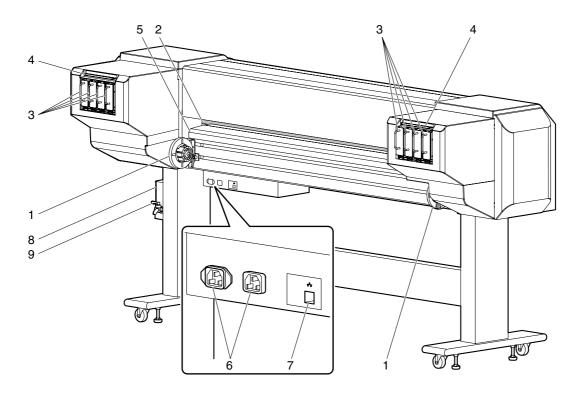

No.	Name	Function
1	Roll media holders	Used to load the roll media. Include flanges where roll media is attached, and the levers that fix the roll media holders.
2	Media feed slot	Used for feeding media.
3	Ink pack slot	Insert the ink pack.


No.	Name	Function
4	S/C card slot	Insert an S/C card.
5	Media guide	Used for feeding media smoothly when the media is set or printed. The heater (pre heater) to warm media is installed.
6	AC inlet	Used for connecting the power cable.
7	Network interface connector	Connects a network interface cable.
8	Waste fluid tank	Used for collecting waste ink discharged from the printer.
9	Waste fluid valve	Open and close when discharging the waste fluid from the waste fluid tank. It is normally closed.

2.2.3 Operation panel

Used for setting operation conditions, display of printer status and various functions. Names of each operation key and status display along with the functions are explained.



- Refer to the following for details regarding the operation method of the operation panel.
 - When performing menu setting from the operation panel: 13 4.3 Menu setups on the operation panel
 - When performing various operations in the operation panel: 12 4.4 Operating from the operation panel

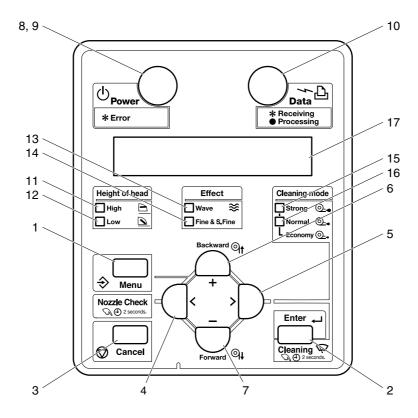

(1) Operation keys

NOTE

• The operation keys are assigned with different functions and names depending on printer status (Normal or Setup menu display).

For details about printer status, refer to "2.3 Printer status".

No.	Name	Normal	Setup menu display
1	[Menu] key	Shifts to the Setup menu.	Shifts from Setup menu display to Normal.
2	[Enter] key	Restarts printing during printing.	The menu to set is selected and it shifts to the next hierarchy. The setting is determined and saved.
	[Cleaning] key	Press and hold this key for two seconds or more to clean the print head.	_
3	[Cancel] key	 When printing: Forcefully terminates printing and deletes one file of the remaining data. When receiving or analyzing: Deletes data that are already received and analyzed, and delete the next data. 	Returns to the previous menu hierarchy. Changes made in the setting are discarded. Shifts from Setup menu display to Normal.
4	[<] key	_	The following menu changes the set value. • Origin menu
	[Nozzle Check] key	Press and hold this key for two seconds or more to perform Nozzle Check printing.	_
5	[>] key	Sets Cleaning Mode. • The lamp of Cleaning Mode that you set lights up in green.	Down the menu level in the directory tree.
6	[Backward↑] key	Media is fed in the reverse direction.	_
	[+] key	_	Changes to the previous item in the displayed menu. The setting is changed to the forward direction. The numeric value is increased during numerical input.
7	[Forward↓] key	Media is fed in the forward direction.	_
	[-] key	Pause to print during printing.	 Changes to the previous item in the displayed setting. The setting is changed to the reverse direction. The numeric value is decreased during numerical input.
8	[Power] key	Turns the printer ON and OFF.	Turns the printer ON and OFF.

(2) Display section

No.	Name	Color	Status	Description
9	Power lamp	Green	Lamp ON	Power ON.
			Lamp blinks	An error has occurred. Error content is displayed on the LCD.
			Lamp OFF	Power OFF.
10	Data lamp	Orange	Lamp ON	Analyzing received data. Under printing.
			Lamp blinks	Receiving data.
			Lamp OFF	Data is not received and analyzed.
11	High lamp	Green	Lamp ON	The head height is set to High.
			Lamp OFF	The head height is set to Low.
12	Low lamp	Green	Lamp ON	The head height is set to Low.
			Lamp OFF	The head height is set to High.
13	Wave lamp	Green	Lamp ON	The Effect menu is set to Wave or Fuzz.
			Lamp OFF	The Effect menu is set to None.
14	Fine &S.Fine lamp	Green	Lamp ON	The Effect menu is set to Fine or Super Fine.
			Lamp OFF	 The Effect menu is set to Wave or Fuzz. When the Wave lamp is turned OFF, the Effect menu is set to None.
15	Strong lamp	Green	Lamp ON	 Cleaning Mode is set to Strong. When the Normal lamp is also turned on, Cleaning Mode is set to Economy.
			Lamp OFF	Cleaning Mode is set to Normal.
16	Normal lamp	Green	Lamp ON	 Cleaning Mode is set to Normal. When the Strong lamp is also turned on, Cleaning Mode is set to Economy.
			Lamp OFF	Cleaning Mode is set to Strong.
17	LCD display section	_	_	Displays operation status of the printer or an error message.



• When an error requiring a restart (fatal malfunction for the printer operation) occurs, all lamps blink with an alarm. \tilde{12}7.2.5 Error requiring restart

If the error persists even when the malfunction is fixed, contact your local MUTOH dealer.

2.3 Printer status

This section explains printer status.

2.3.1 Normal

Printing is possible when media is loaded.

The various functions for printing can be performed on the operation panel.

2.3.2 Setup menu display

Various settings regarding printing can be made from the operation panel. The various functions for printing can be performed on the operation panel. Display contents in the LCD monitor of the operation panel are as follows.

2.3.3 Changing printer status

Follow the procedure below and change printer status.

(1) Normal → Setup menu display

Press the [Menu] key on the operation panel when the printer is Normal.

• "Menu 1: Setup>" is displayed on the operation panel and the display shifts to the Setup menu.




• For details regarding the Setup menu, refer to "4.3 Menu setups on the operation panel".

(2) Setup menu display → Normal

When the printer is at the Setup menu display, perform either of the following operations to shift the operation panel to the Normal display.

- Press the [Cancel] key on the operation panel.
- In the Setup menu, leave the keys untouched for three minutes.

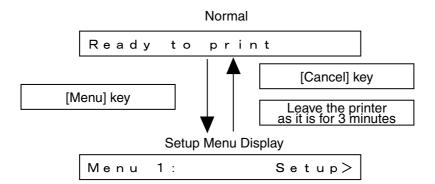

- When the CR maintenance menu is displayed, even leaving the keys untouched for three minutes does not return to the printer to normal status.
 - 下5.1.19 CR Maintenance menu
- For details on Status message, refer to "7.2.1 Status messages".

3 Before using

This chapter explains necessary steps before using the printer.

3.1 Power cable connection

This section explains power cable connection.



- Be sure to use the power cable supplied with the printer.
 Using other power cables can cause an electric shock or fire.
- Do not use a damaged power cable.
 It could lead to an electric shock and fire.

A CAUTION


- Pay attention to the following points when handling power cable.
 - Do not do anything forcefully on the power cable.
 - Do not put heavy objects on the power cable.
 - Do not bend, twist or pull the power cable by force.
 - Do not route the power cable near heating appliances.

NOTE

• Contact your local MUTOH dealer in case of power cable damage.

Follow the procedure below to install the power cable.


1. Make sure that the printer is turned OFF.

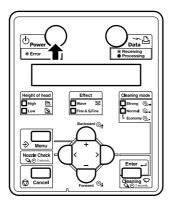

NOTE

• The power is ON when the [Power] key of the operation panel is pressed in. Press the key once again to turn OFF the power.

2. Connect the power cables $(\times 2)$ to the AC inlets $(\times 2)$ on the right side of product.

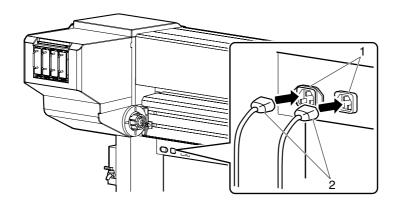

No.	Name
1	AC inlet
2	Power cable

3. Insert the power cable plug firmly in the socket.



- Do not take out or insert the power plug with a wet hand.
 This could lead to an electric shock.
- Make sure to use only the specified power supply (AC 100 V to 120 V or AC 220 V to 240 V).

If a power supply other than the specified voltage is used, it could cause an electric shock and fire.

 Take power for the printer directly from the power socket (AC 100 V to 120 V or AC 220 V to 240 V).

Do not use multiple plugs on the same socket.

This could generate heat and might cause fire.

 Make sure to use a dedicated power socket with an earth terminal for the power supply, and connect it to an earth terminal.


If the earth wire is not connected, an electric shock or fire may occur.

- Do not connect an earth wire to the following places.
 - Gas pipe
 There is a possibility of ignition and explosion.
 - Earth wire of telephone cables and lightning rods
 Heavy current might flow whenever lightning strikes.
 - Water pipe and faucet
 The earth might not work if a plastic pipe is connected in the middle of the metal pipe.



- Pay attention to the following points when handling the power supply plug. Any mishandling of the power cable could cause a fire.
 - Make sure that no foreign substances such as dust etc. are stuck to the power plug.
 - Make sure that the power plug is firmly inserted to the edge of the power socket.
- When you do not use the printer for a long period, make sure to pull out the power plug from the power socket for safety.
- Make sure to connect an earth wire to the earth connection that meets the following standards.
 - Earth terminal of power socket
 - Earth wire with copper plate which is buried at 650 mm or more, deep in the ground.

- Contact the retail outlet of purchase if the earth connection cannot be established, or if the earth connection is not given.
- When the power supply of the printer is ON, do not pull out the power cable from the power socket.
 - Whenever the plug is pulled out from the power socket, allow one minute or more before inserting the plug in the power socket again.
- To use the two power cables plugged in the inlets, a total capacity of 20 A or over is required. If the power source cannot supply the required capacity, plug the two power cables in the different power sources respectively.

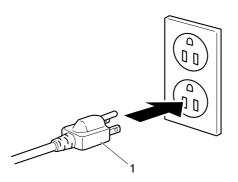

No.	Name
1	Power plug


3.2 Turning the power ON/OFF

This section explains how to turn the printer ON/OFF.

3.2.1 Turning the power ON

Follow the procedure below to turn the power ON.

- 1. Press the [Power] key on the operation panel to turn ON the printer.
 - The Power lamp on the operation panel lights up in green.

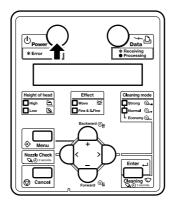

- The printer starts initial operation.
- When the initial operation is complete, the printer enters Normal.



• If there is a problem during the initial operation, a message is displayed on the operation panel and the printer may stop operating.

If operation stops, refer to "7 Troubleshooting" and deal with the problem.

3.2.2 Turning the power OFF

Follow the procedure below to turn the printer OFF.

- 1. Verify the following regarding the operational condition of the product.
 - Printing or other operations are not in progress.
 - The operation panel display is Normal.
 - The Low lamp on the operation panel lights up in green.


- If the High lamp on the operation panel lights up in green, the head height is set to High. Return the head height to Low before turning the power OFF.

 1374.2.5.2 When returning the print head to the original position
- 2. Press the [Power] key on the operation panel to turn OFF the printer.




- If the operation panel is in the following status, the power is ON.
 - The [Power] key is pressed in.
 - The Power lamp lights up in green.

Press the key once again to turn OFF the power.

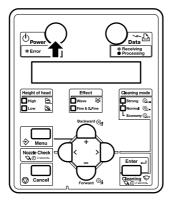

- "CR Mainte.: Start" is displayed on the operation panel.
- 3. Press the [Enter] key on the operation panel.

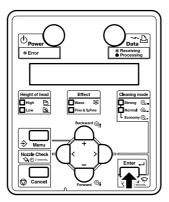


- Maintenance starts.
- The print head moves to the left.
- The cleaning wiper raises.

- "CR Maintenance: End" is displayed on the operation panel.
- 4. Clean the cleaning wiper unit.

 1. Cleaning the cleaning wiper unit



- · Press the [Cancel] key if cleaning the cleaning wiper unit and around the print head is not performed.
- 6. After cleaning is completed, press the [Enter] key on the operation panel.

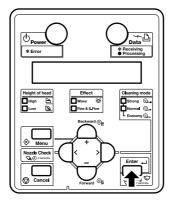


- The cleaning wiper returns to its original position.
- The print head returns to its original position.
- The printer starts the procedure to turn the power OFF.
- "Power Off" is displayed on the operation panel.

- If the head height is set to High, "Change Head Gap Low" is displayed on the operation panel and the procedure to turn the power OFF stops.
 - To restart the procedure, return the head height to Low.
 - 13 4.2.5.2 When returning the print head to the original position
- All the lamps on the operation panel and the LCD monitor are turned OFF.
- The printer automatically turns the power OFF.

- If there is a problem during turning OFF operation, a message is displayed on the operation panel and the printer may stop operating.

 If operation stops, refer to "7 Troubleshooting" and deal with the problem.
- After turning OFF the printer, wait for 10 seconds or longer to turn it ON again.
- 7. Raise the media loading lever when the product is not used for a long time.

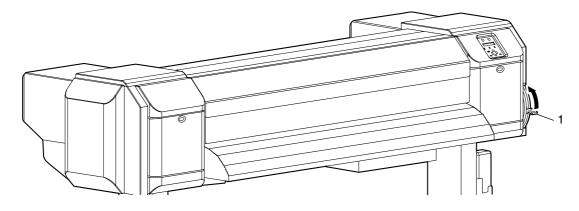

No.	Name
1	Media loading lever

3.3 Installing ink packs

This section describes the replacement time and steps of ink packs.



- Before performing work, make sure to read the safety data sheet (MSDS) included with the printer.
- Keep the work area well-ventilated.
 This prevents fire, and stops operators from feeling sick from bad air.
- When handling ink packs, pay attention so that ink does not get into your eyes or stick to your skin.

If ink gets into your eyes or sticks to your skin, immediately wash it off with water. Failing to do so might cause irritation or light inflammation of eyes. In case of any abnormality, consult a physician immediately.

Do not disassemble the ink packs.
 If disassembled, there is a possibility that ink might come into contact with eyes or skin.

- When refilling ink, use genuine ink packs.
 - This printer is designed to use genuine ink packs.

If you use ink packs which are not produced by the original manufacturer,


- Printing might become blurred and the end of the ink in the pack might not be detected correctly.
- Any problems caused by using an ink pack other than those recommended above will not be covered by the warranty, and repair expenses will be paid by the customer.
- Refer to the following for types and details of ink packs. LP 8.3 Options/Supply list
- Do not give ink packs strong shakes.
 Doing so may cause ink leakage.
- Do not disassemble the ink packs.

 A disassembled ink packs cannot be used.
- Make sure to use a dedicated cleaning fluid (model No.: VJ-BIOINK1-CL880).
- Before installing the ink pack, shake it gently. Doing so will preserve print quality.
- When an ink pack is moved from a cold place to warm place, keep the ink pack for three hours or more in the new printing environment before printing.
- A dedicated S/C card is included with the ink pack for this printer.

 If you insert or remove the ink pack in the following situations, information contained in the S/C card will be damaged and the ink pack cannot be used.
 - During printing
 - For several seconds after inserting the S/C card


Follow the procedure below to install the ink pack.

1. Turn the unit ON.

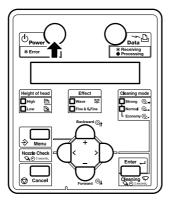


- The printer starts the initializing operation.
- After the initial operation is compete, "Start Ink Charge—> E" is displayed on the operation panel.

2. Press the [Enter] key on the operation panel.

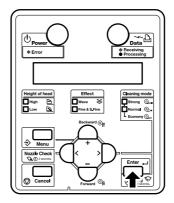


- "Insert CleaningCart." is displayed on the operation panel.
- 3. Remove the cleaning fluid S/C cards and cleaning fluid packs (8 each) from the bag.
- 4. Insert the cleaning fluid S/C cards (8 count) one-by-one into the S/C card slots (8 locations).
 - 4 S/C card slots are located on both the left and right sides of the rear of the printer.
 - Insert the S/C card all the way to the end of the slot.
 - a. Left-rear side of the printer

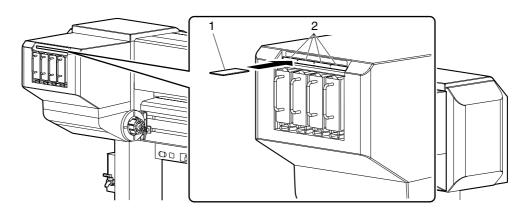


No.	Name
1	Cleaning fluid S/C card
2	S/C card slot

b. Right-rear side of the printer

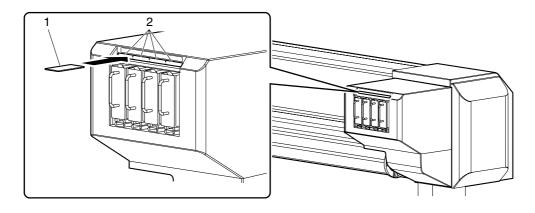


No.	Name
1	Cleaning fluid S/C card
2	S/C card slot

- 5. Insert the cleaning fluid packs (4 count) one-by-one into the ink pack slots (4 locations) on the left side of the rear of the printer.
 - a. Pull out the ink pack slot.

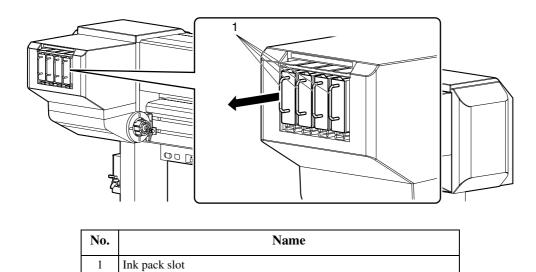


b. Shake the cleaning fluid pack two to three times gently before inserting it into the ink pack slot.

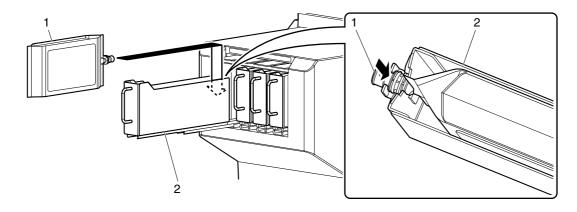


No.	Name
1	Cleaning fluid pack
2	Ink pack slot

- c. Re-insert the ink pack slot.
 - Insert the ink pack slot all the way to the end of the slot.

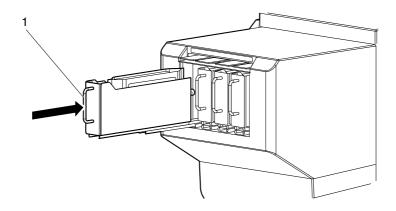

No.	Name
1	Ink pack slot


- 6. Following the same procedure as in step 5, insert the cleaning fluid packs (4 count) one-by-one into the ink pack slots (4 locations) on the right side of the rear of the printer.
 - When you have installed all of the cleaning fluid packs, "During Washing" is displayed on the operation panel and the printer starts filling cleaning fluid.
 - After the cleaning fluid is filled, "Remove Cartridges" is displayed on the operation panel.
- 7. Remove all of the cleaning fluid S/C cards.

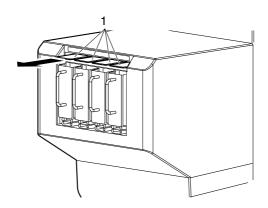

Ī	No.	Name	
	1	Cleaning fluid S/C card	


8. Remove all the cleaning fluid packs.

a. Pull out the ink pack slot.

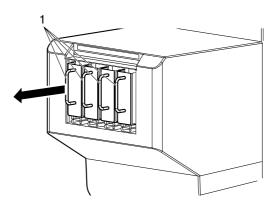

No.	Name
1	Ink pack slot

b. Remove the cleaning fluid pack from the ink pack slot.

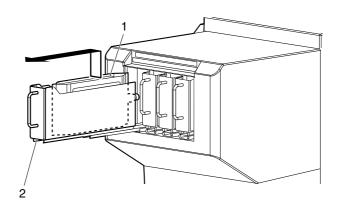


No.	Name
1	Cleaning fluid pack
2	Ink pack slot


- When you have removed all of the cleaning fluid packs, "During Washing" is displayed on the operation panel and the printer starts head cleaning.
- After the Head washing is complete, "Wash retry? No" is displayed on the operation panel.

NOTE

- When performing Head washing again before filling the cleaning fluid, press the [+] key or [-] key on the operation panel to select "Yes". Then, press the [Enter] key to start Head washing.
- 9. Press the [Enter] key on the operation panel.

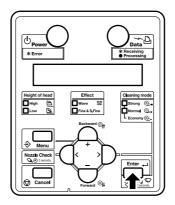


- "Insert InkCartridges" is displayed on the operation panel.
- 10. Remove the ink S/C cards and ink packs (8 each) from the bag.
- 11. Insert the ink S/C cards (8 count) one-by-one into the S/C card slots (8 locations).
 - Ink S/C cards are specified depending on the colors of the ink pack. Match the mark on each slot with the color of the ink pack.
 - Insert the S/C card all the way to the end of the slot.
 - a. Left-rear side of the printer

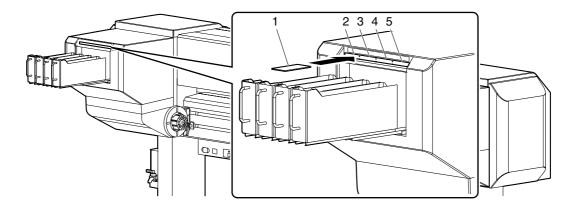

No.	Name
1	Ink S/C card
2	S/C card slot K1
3	S/C card slot K2
4	S/C card slot C1
5	S/C card slot C2

b. Right-rear side of the printer

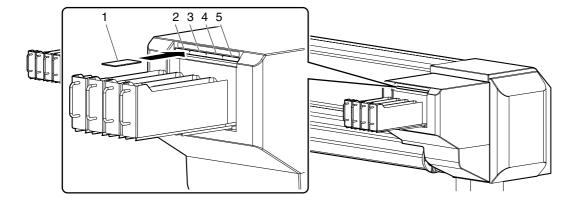


No.	Name
1	Ink S/C card
2	S/C card slot M1
3	S/C card slot M2
4	S/C card slot Y1
5	S/C card slot Y2

12. Insert the ink packs (K, C: 2 each) one-by-one into the ink pack slots (K, C: 2 locations each) on the left side of the rear of the printer.




- Steps a through b below explain the procedure for installing ink pack K (slot K1).
- a. Shake the ink pack two to three times gently before inserting it into ink pack slot K1.

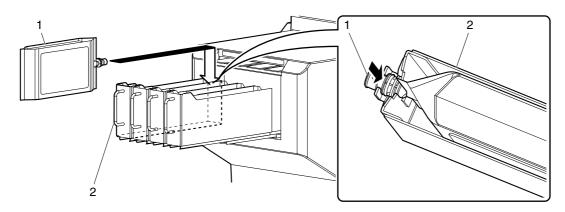

No.	Name
1	Ink pack K
2	Ink pack slot K1


- b. Re-insert the ink pack slot.
 - Insert the ink pack slot all the way to the end of the slot.

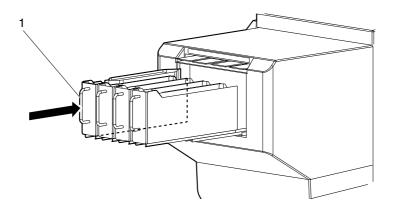

No.	Name
1	Ink pack slot K1

- c. Following the same procedure as in steps a to b, install the remaining ink packs (K: 1 pack, C: 2 packs) into the ink pack slots.
 - Ink packs are specified depending on the colors of the ink pack.


 Match the mark on each slot with the color of the ink pack.

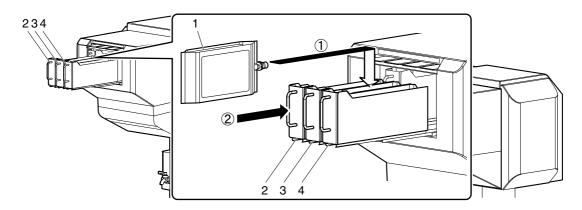

No.	Name
1	Ink pack
2	Ink pack slot K2
3	Ink pack slot C1
4	Ink pack slot C2

- 13. Following the same procedure as in step 12, insert the ink packs (M, Y: 2 each) into the ink pack slots (M, Y: 2 locations each) on the right side of the rear of the printer.
 - Ink packs are specified depending on the colors of the ink pack.

 Match the mark on each slot with the color of the ink pack.

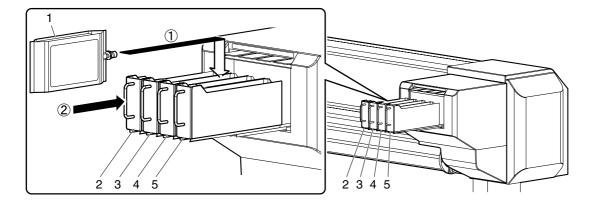

No.	Name
1	Ink pack
2	Ink pack slot M1
3	Ink pack slot M2
4	Ink pack slot Y1
5	Ink pack slot Y2

- "Ink Refill **%" is displayed on the operation panel and ink replenishment starts.
- Ink replenishment takes about 12 minutes.

 Ink filling operation and pause operation are repeated during the ink replenishment.
- When "100%" is displayed, the ink replenishment is complete.

- Do not perform the following operations during ink filling.
 - Do not turn the printer OFF.
 - Do not unplug the power cable.
 - Do not open the front cover.
 - Do not raise the media loading lever.
- After the ink replenishment is complete, "Media End" is displayed on the operation panel.

- If the printer perform the nozzle check printing immediately after initial ink replenishment is complete, the following results may occur.
 - Printed lines become blurred.
 - The data is partially not printed.

In such cases, follow "6.2.3 Head cleaning" and refill a small amount of ink. Then, check the printing result.

If there is no improvement in the print result even after refill a small amount of ink, leave the printer unused for an hour or more. Then, refill a small amount of ink again and check the print result.

If there is still no improvement, contact your local MUTOH dealer.

3.4 Setting media

This section explains how to set media and settings for each media type.

NOTE

• Refer to the following for details about handling media.

1374.2 Media

• Refer to the following for types and details of recommended media.

工 4.2.1 Media type

18.3 Options/Supply list

3.4.1 Loading roll media

This section explains how to load roll media.

Put the roll media in the center.

NOTE

• The following roll media can be attached to the scroller supplied with this unit.

• Outer circumference: 150 mm or less

• Tube circumference: 3 in.

• Weight: 30 kg or less

• Length: 50 m or less


• Width: 1,625 mm or less

• Length: 0.3 mm or less

18 8.1.1 Printer specifications


Follow the procedure below to load roll media.

1. Loosen the fixing levers on the right and left side of the rear. Set the distance between the roll media holders wider than the roll media width.

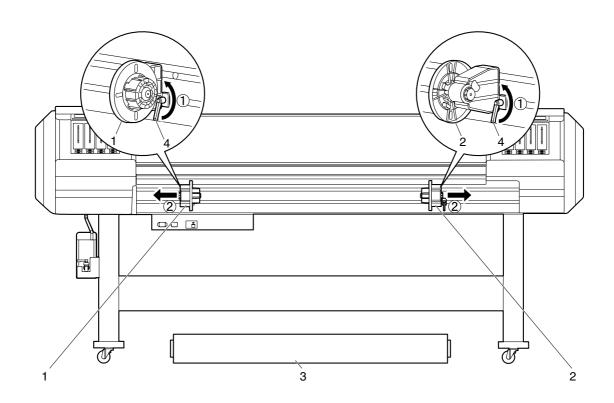


No.	Name
1	Roll media holder (Left)
2	Roll media holder (Right)
3	Roll media
4	Fixing lever

2. Fixed the Roll media holder (Left).

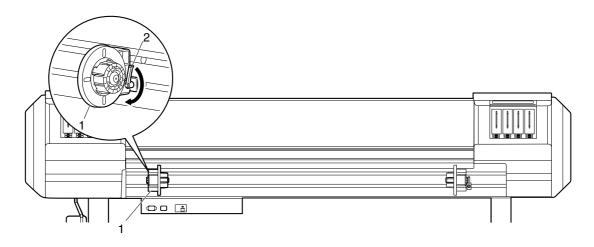


No.	Name
1	Roll media holder (Left)
2	Fixing lever

3. Set the roll media to the roll media holder (Left).

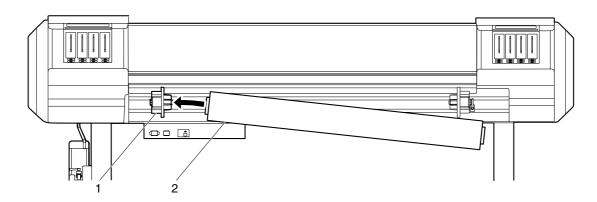

No.	Name
1	Roll media holder (Left)
2	Roll media

4. Set the roll media to the roll media holder (Right) and fixed the fixing lever.

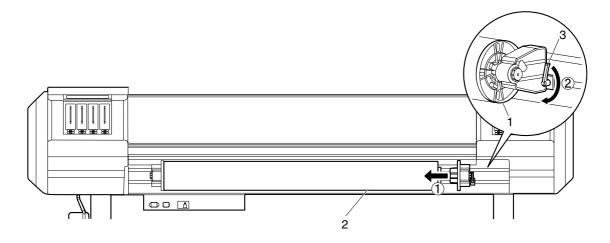


No.	Name
1	Roll media holder (Right)
2	Roll media
3	Fixing lever

5. Loosen the fixing levers of the right and left roll media holders, move the roll media to the center and tighten the levers.



• Fix the roll media holders by pressing the holders to the printer.

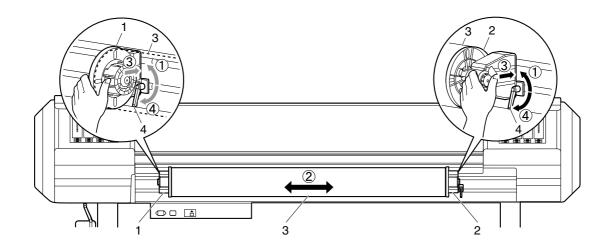

No.	Name
1	Roll media holder (Left)
2	Roll media holder (Right)
3	Roll media
4	Fixing lever


- The procedure for loading the roll media is complete.
- Set the roll media to the printer continuously as shown below. 文字 3.4.2 Setting roll media

3.4.2 Setting roll media

This section explains how to set roll media.

Follow the procedure below to set roll media.


1. Turn the unit ON.

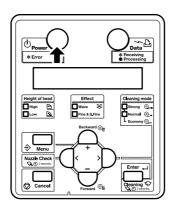




- Do not operate the media loading lever during initial operation.

 The print head portion may touch the pressurizing roller portion, and cause a malfunction.
- The printer starts the initializing operation.
- "Media End" is displayed on the operation panel.
- 2. Raise the media loading lever.

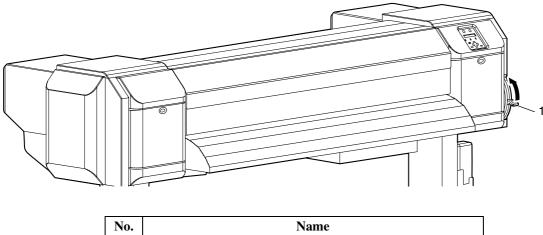


No.	Name
1	Media loading lever

- "Lever Up" is displayed on the operation panel.
- 3. Open the front cover.

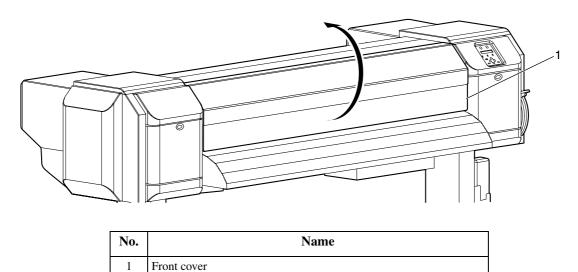


4. Set the roll media to the media feed slot.

• If the end of the roll media is not wound tightly, wind it tightly again, and then load it.

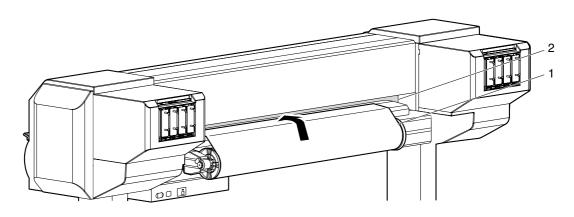

ľ	No.	Name
	1	Roll media
	2	Media feed slot


5. Pull the roll media out about 1 m from the front media feed slot which is located inside of the front cover.

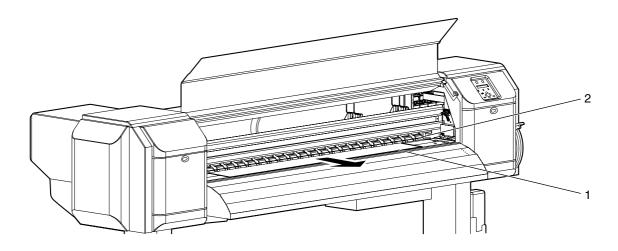

No.	Name
1	Roll media
2	Media feed slot

6. Rewind the roll media a little by rolling the flange on the roll media holder while holding the edge of the media, and eliminate any slack or slant.


- If you set the roll media free while rewinding, the roll media will fall out from the media feed slot on the rear of the product.
- Confirm that the right edge of the roll media does not go beyond the loading mark. If it does, it may affect print quality.

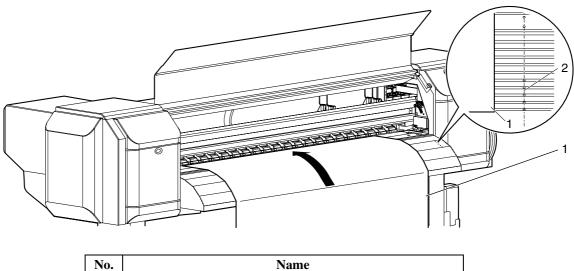

No.	Name
1	Roll media
2	Media loading mark

NOTE

- When setting the roll media, set both sides of the media at least 5 mm away from the edge of the pressurizing roller.
 - Slippage or creases may occur during printing.

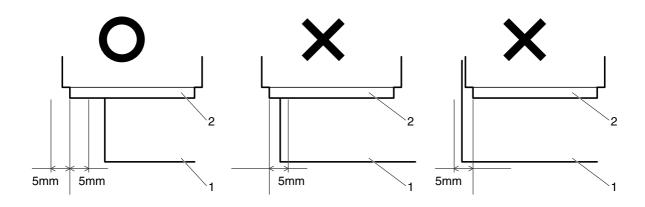


No.	Name
1	Roll media
2	Pressurizing rollers

- 7. If the edge of the roll media is set less than 5 mm from the edge of the pressurizing roller, follow the procedure below to adjust the position of the roll media.
 - a. Loosen the fixing levers of the right and left roll media holders, and move the roll media to left or right.
 - b. After moving the roll media, fix it with fixing levers of the right and left roll media holders.




• Fix the roll media holders by pressing the holders to the printer.

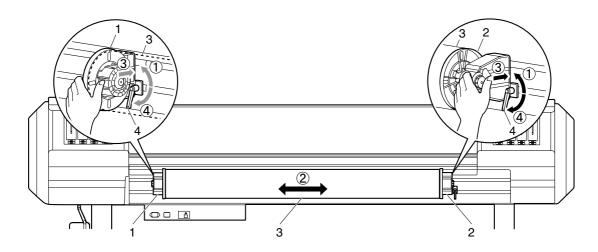


No.	Name
1	Roll media holder (Left)
2	Roll media holder (Right)
3	Roll media
4	Fixing lever


8. Lower the media loading lever.

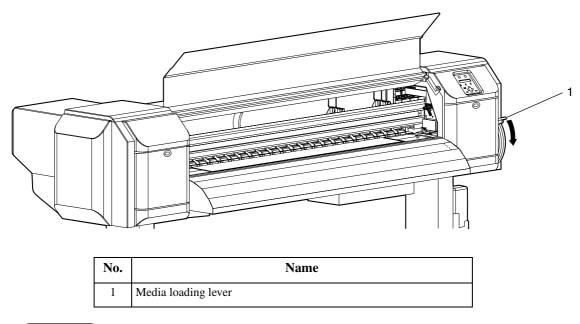

- When loading the new roll media, cut the front edge of the media if it is not straight. \text{\$\mathbb{E}\mathbb{F}}4.4.3\$ Cutting media
- When you increase the pressure for the media, lower the media loading lever further as shown below.

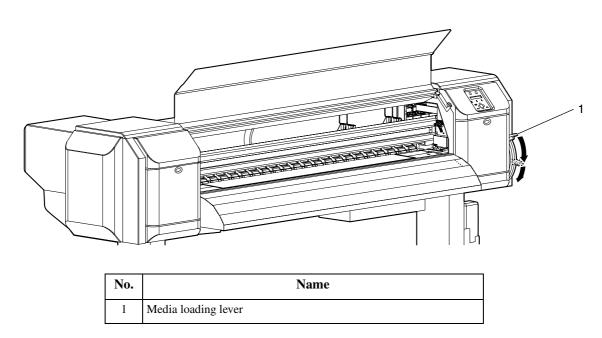

9. Close the front cover.

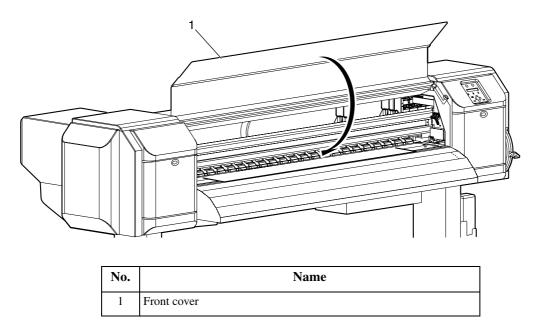


- The procedure for setting the roll media is complete.
- Set the media type continuously as shown below. 文字 3.4.3 Setting media type

3.4.3 Setting media type

This section explains how to set the media type.

Follow the procedure below to set the media type.

1. Turn ON the printer and load media.

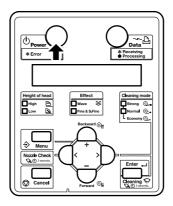


• After the media is loaded, the display shifts to the media type setup menu.




• Refer to the followings for media loading.

了3.4.2 Setting roll media

2. Press the [+] key or [-] key to select the type of the loaded media.

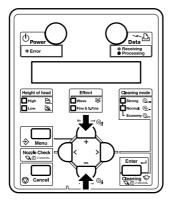

3. Press the [Enter] key on the operation panel.

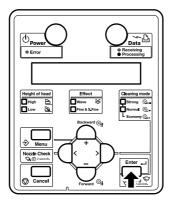


NOTE

- If the following operations are performed in the media type setup menu, the printer starts media initial operation without specifying a media type.
 - Pressing the [Cancel] key on the operation panel.
 - No keys on the operation panel are pressed for 10 seconds.
- The media type is set.
- "Media Initial" is displayed on the operation panel.
- Media initial operation starts.
- After media initial operation is complete, "Ready to Print" is displayed on the operation panel and the display shifts to Normal.
- This completes media loading.


3.5 Test print

Follow the procedure below to perform Test printing to confirm that the printer works correctly.


- 1. Turn ON the printer and load the roll media. 文字 3.4.2 Setting roll media
- 2. Confirm that the printer functions normally.
- 3. Display the Test print menu on the operation panel.
 - a. Press the [Menu] key on the operation panel.

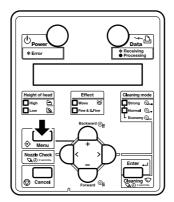


- "Menu 1: Setup>" is displayed on the operation panel.
- The operation panel shifts to the Setup menu display.
- b. Press the [+] key or [-] key to select "Menu2: Test Print".

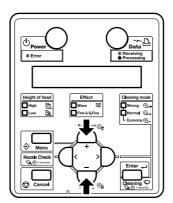


c. Press the [>] key on the operation panel.

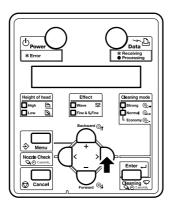

- "Test1: Nozzle Check" is displayed on the operation panel.
- The display shifts to the Test print menu. LF 5.2 TestPrint Menu
- 4. Press the [+] key or [-] key on the operation panel to select an item for printing from the following items.
 - Nozzle check
 - Mode print
 - Set List
 - ALL Set List
 - Palette

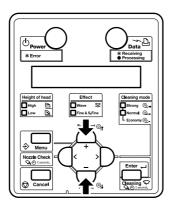


- When "Banner 1" or "Banner 2" is set in the Print Mode menu, "PalettePrint" is not displayed in the Test Print menu.
 - 下5.2 TestPrint Menu
- 5. Press the [Enter] key on the operation panel.

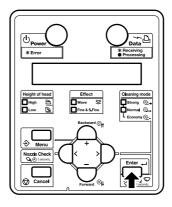

• Start performing Test Print for the selected item.



- Refer to the following for details on each of the print list items. \(\subseteq 3.5.1\) Nozzle check to 3.5.4 Palette print
- 6. Repeat step 4 to step 5 when performing test print for other items.
- 7. Press the [Cancel] key on the operation panel to exit from test print.

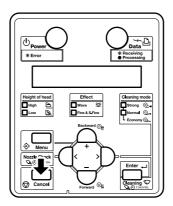

- The operation panel returns to Normal.
- The procedure for test printing is complete.

3.5.1 Nozzle check

It is used to check whether there are any clogged heads, or missing or blurred prints.




• If the nozzle check result indicates that the checked points are blurred or missing, clean the head. \[\mathbb{E}\] 6.2.3 Head cleaning

Perform the nozzle check once again at the end of the work.



• Refer to the following for printing procedure.

13.5 Test print

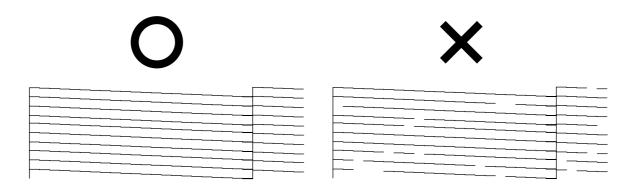

3.5.2 Mode print

Used to confirm the following printing conditions.

- Print Mode
- Effect
- Pre heater set temperature
- Platen heater set temperature
- Drier heater set temperature
- Adjustment value



• Refer to the following for printing procedure.

13.5 Test print

2007/01/01 0:00 Q4(720x720Q 4Pass Bi)-Wave1/Pre:30° C/Platen:30° C/After:30° C/PF Adjust:0

3.5.3 Setup print

Used to check the current setup of the printer.



• Paste the setup print on this page.



- · User media and print mode lists are printed only when "ALL Set List" is selected.
- Refer to the following for printing procedure.

 13.5 Test print

Media Type
Print Mode
PF>Initial Adjust
PF>Micro (2pass)
PC>Micro (3pass)
PC>Micro (8pass)
PF>Micro (8pass)
PreHeater
PlatenHeater
Standby Heat
Vacuum Fan Type 4
Graphics 2
250. 0/250rm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
30° C
60min Type 8 Graphics 2 250. 0/250mm Opulse Opulse Opulse 30° C 30° C 60min High Type10
Graphics 2
250.0/250mm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type 2
250.0/250mr
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type 3
Graphics 2
250.0/250mm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type 5
Graphics 2
250.0/250mm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type 7
Graphics 2
250.0/250rm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
30° C
60min Type 9
Graphics 2
250. 0/250mm
Opulse
Opulse
Opulse
Opulse
Opulse Type 6
Graphics 2
250.0/250mm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type 1
Graphics 2
250.0/250m
Opulse
Opulse
Opulse
Opulse
Opulse
30° C
30° C
30° C
60min Media Type
Print Mode
PFDInitial Adjust
PFDMioro (Zpass)
PFDMioro (Apass)
PFDMioro (Apass) Type11
Graphics 2
250.0/250mm
Opulse
Opulse Type12
Graphics 2
250.0/250m
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type13 Graphics 2 250.0/250mm Opulse Opulse Opulse Opulse 30° C 30° C 60min Type14
Graphics 2
250.0/250mm
250.0/250mm
Opulse
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type15 Graphics 2 250. 0/250mm Opulse Opulse Opulse Opulse 30° C 30° C 60min High Type16
Graphics 2
250.0/250mm
Opulse
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min Type17
Graphics 2
250.0/250mm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type19
Graphics 2
250.0/250mm
Opulse
Opulse
Opulse
Opulse
Opulse
Opulse
Opulse
Opulse
Opulse
High Type20 Graphics 2 250.0/250mm Opulse Opulse Opulse Type18
Graphics 2
250.0/250mr
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High 30° C 30° C 60min High Media Type
Print Mode
PF>Initial Adjust
PF>Micro (3pass)
Pf>Micro (4pass)
Pf>Micro (4pass)
Pf>Micro (8pass)
Pf>Micro (8pass)
PreHeater
PlatenHeater
Standby Heat
Vacuum Fan Type21 Graphics 2 250.0/250mm Opulse Opulse Opulse Opulse 30° C 30° C 30° C 60min High Type22
Graphics 2
250. 0/250m
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type23 Graphics 2 250.0/250mm Opulse Opulse Opulse Opulse 30° C 30° C 30° C Type24
Graphics 2
250. 0/250rm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min Type26
Graphics 2
250. 0/250mm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type27 Graphics 2 250. 0/250m Opulse Opulse Opulse 30° C 30° C 30° C 60min High Type30
Graphics 2
250. 0/250mm
Opulse
Opulse
Opulse
Opulse
30° C
30° C
60min
High Type29
Graphics 2
250. 0/250mm
Opulse
Opulse
Opulse
Opulse

3.5.4 Palette print

Used to compare pen colors used on the computer to the printing colors.




• When "Banner 1" or "Banner 2" is set in the Print Mode menu, "PalettePrint" is not displayed in the Test Print menu.

下5.2 TestPrint Menu



Refer to the following for printing procedure.
 3.5 Test print

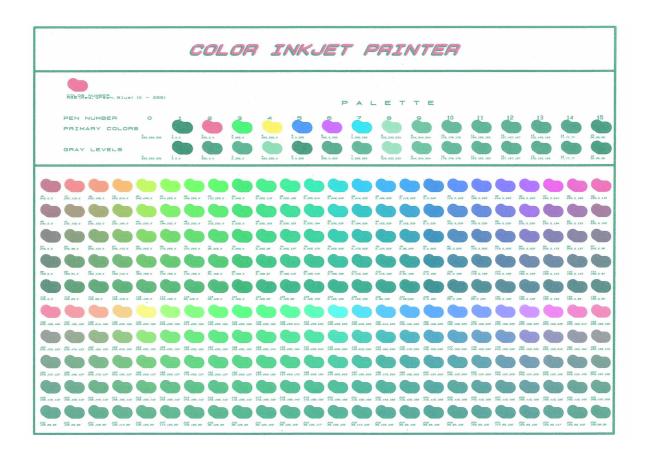

3.6 Adjust print


It is used for optimizing the quality of image prints (Alignment).

Alignment must be set every printing mode.


After selected the printing mode that you want to use, follow the procedure below to perform alignment.




- This printer was adjusted at factory shipment so that it obtains the optimum print quality. Adjust the quality if the print quality changes after the installation environment or the media is changed.
- 1. Turn ON the printer and load the roll media. 12 3.4.2 Setting roll media
- 2. Confirm that the printer functions normally.
- 3. Display the Printing mode menu on the operation panel.
 - a. Press the [Menu] key on the operation panel.

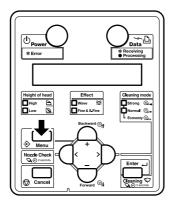


- "Menu 1: Setup>" is displayed on the operation panel.
- The operation panel shifts to the Setup menu display.
- b. Press the [>] key on the operation panel.

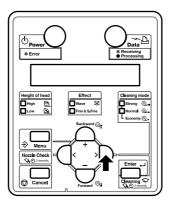


- "Set1: MediaType" is displayed on the operation panel.
- c. Press the [Enter] key on the operation panel.

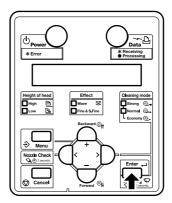

- "Media: Type 1" is displayed on the operation panel.
- d. Press the [+] key or [-] key on the operation panel to select the media type to use.

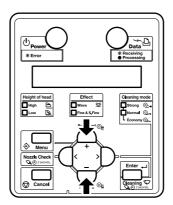


e. Press the [Enter] key on the operation panel.

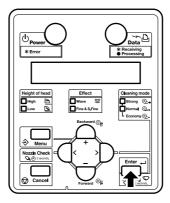


• "**>1: Print Mode" is displayed on the operation panel.




- The selected media (Type 1 to 30) is displayed in "**". \$\sum_{5.1.1}\$ MediaType menu
- f. Press the [Enter] key on the operation panel.

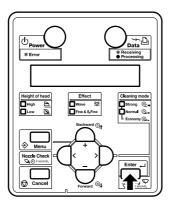


- "Mode: Quality 2 >" is displayed on the operation panel.
- The display shifts to the Printing mode menu. 下了5.1.1.1.1 Print Mode menu
- 4. Select the printing mode that you want to use.
 - a. Press the [+] key or [-] key on the operation panel to select the printing mode to use.

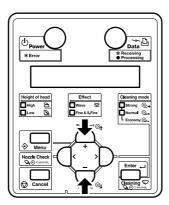


b. Press the [Cancel] key on the operation panel several times.

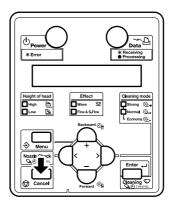


- The operation panel returns to Normal.
- 5. Display the Adjust Print menu on the operation panel.
 - a. Press the [Menu] key on the operation panel.

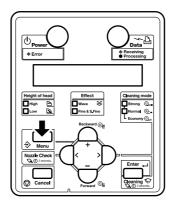


- "Menu 1: Setup>" is displayed on the operation panel.
- The operation panel shifts to the Setup menu display.
- b. Press the [+] key or [-] key to select "Menu3: Adjust Print".

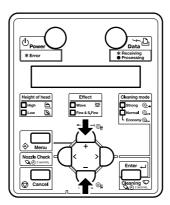


c. Press the [>] key on the operation panel.

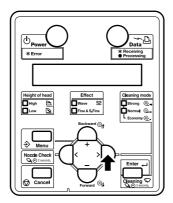


- "Adj.1: Confirm" is displayed on the operation panel.
- The display enters the Adjust Print menu. \Sigma 5.3 Adjust Print menu
- 6. Press the [Enter] key on the operation panel.

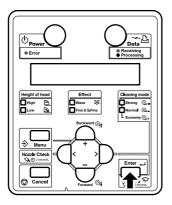


• A confirmation pattern for quality adjustment is printed.

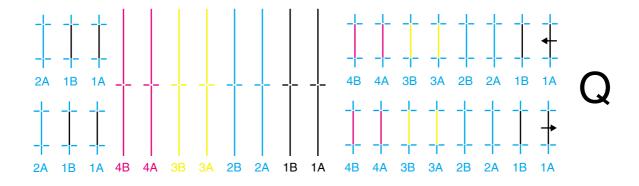


- After the confirmation pattern is printed, the operation panel shifts to Normal.
- 7. Confirm that the confirmation pattern printing result is as follows.

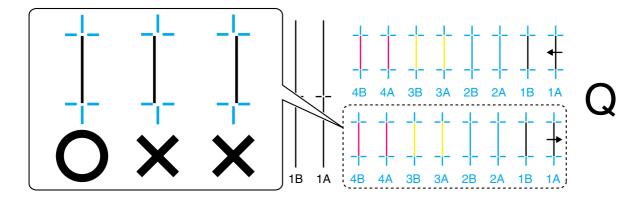

- a. When the printing result is O: You do not need perform Alignment.The procedure for Alignment is complete.
- b. When the printing result is ×: You need to perform Alignment. Proceed to step 8.
- 8. Register a set value for Bi-D Quality (two-way printing/quality priority mode).
 - a. Display the Adjust Print menu on the operation panel in the same way as in step 5.
 - b. Press the [+] key or [-] key on the operation panel to select "Adj.5: Bi-D Quality".

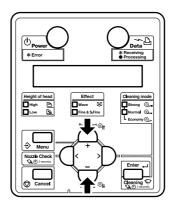


c. Press the [Enter] key on the operation panel.

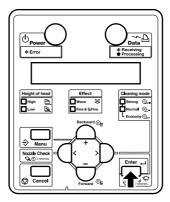


• Start Bi-D Quality pattern printing.

d. Check three print samples that printed with Bi-D Quality pattern, and select the number that is not out of alignment.


"4" is selected in the next printing sample.

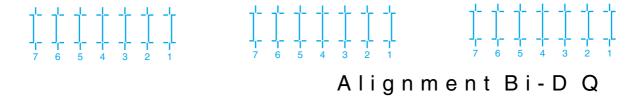

e. Press the [+] key or [-] key to enter the number that you selected in Step d.

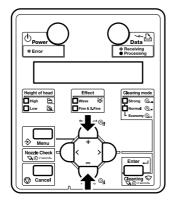

f. Press the [Enter] key on the operation panel.

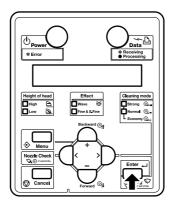

- The set value for Bi-D Quality is registered.
- The operation panel returns to Normal.
- 9. Register the setting for Bi-D Normal (two-way printing/normal mode) in the same way as in step 8.
 - The procedure for Alignment is complete.

3.7 Connecting the printer to PC

This section explains how to connect the printer and a PC.

3.7.1 System requirements

The following are the system requirements for this printer and software server RIP (optional).

Operating system	Windows 2000 Professional, Windows XP
CPU	Pentium III processor 1 GHz or more
Memory (RAM)	512 MB or more
Hard disk free space	10 GB or more



- The required memory varies depending on the application software or the print data type.
- · A large hard disk and memory are recommended.

3.7.2 Preparing cables

The printer is equipped with a network interface for connecting with a PC.

You need a network interface cable to connect a PC with this printer.

Prepare the cable depending on the PC that it will be connected to.




- About connecting a network interface cable, refer to "3.7.3 Connecting a network interface cable".
- For the recommended cable specifications, refer to "8.2 Interface specification".

3.7.3 Connecting a network interface cable

This section explains how to connect a network interface cable.

Follow the procedure below to connect this printer to your PC.

- 1. Turn OFF both the printer and PC.
- 2. Insert the network interface cable into the network interface connector located on the right of the printer.

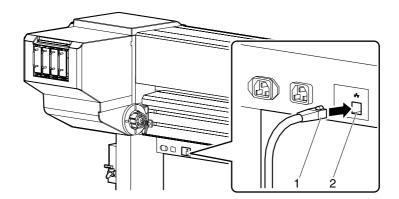

No.	Name
1	Network interface cable
2	Network interface cable connector

3. Connect the other connector of the network interface cable to your PC.



- About connecting to your PC, refer to the operation manual included with the PC.
- For network setting on the side of the printer, refer to "4.3.2 Panel setup menu overview".

4 Handling the printer

This chapter explains how to handle the printer.

4.1 Print flow chart

The following flow chart illustrates the procedure for drawing with the printer. Refer to each section as required.

1. Create print data.
Create print data with application software.

J

2. Turn the power ON and set the media.

13.4 Setting media

工置 4.2 Media

 \downarrow

3. Set up printing conditions.

13 4.3 Menu setups on the operation panel

 \downarrow

4. Perform the printing.

13 4.4 Operating from the operation panel



 Do not store combustible materials on the platen or media guide while performing the heater operation.

It could lead to fire.

Do not spill flammable liquid over the platen or media guide.
 This could lead to fire.



- Before performing work, make sure to read the safety data sheet (MSDS) included with the printer.
- Do not touch the media guide during printing. It is hot and may cause a burn.
- Do not touch the media feed slot, platen or media guide while heaters are operating. They are hot and may cause a burn.
- Keep the work area well-ventilated.
 This prevents fire, and stops operators from feeling sick from bad air.

• Do not open the front cover during printing.

If the front cover is opened, printing will be interrupted.

Printing restarts if you close the front cover. However, you are not guaranteed to have high print quality.

4.2 Media

This section explains details of available media for this printer.

4.2.1 Media type

The type and quality of media greatly influence the print result.

Use media that matches the application, taking the following information into account.

Various recommended media are prepared for this printer as follows.

Select the appropriate media according to the usage.



- For details of the recommended media, contact your local MUTOH dealer.
- If failures or malfunctions of the printer occur by the use of media that is not dedicated:
 - The printer will not be covered by the warranty and repair expenses will be paid by the customer.
 - For details, refer to the following manuals.
 - 136 Maintenance
 - TT7 Troubleshooting
 - To request a repair, contact your local MUTOH dealer.



- When printing on media that is not recommended,
 - Refer to the media manual or ask where you purchased the media for information on media types and appropriate settings for this printer.
 - Set the print quality according to "5.1.1 MediaType menu".

4.2.2 Cautions on handling media

Note the following points when handling the media.

• Use recommended media under an appropriate environment.

The appropriate temperature and humidity for printing are as follows.

	Temperature	Humidity
Guaranteed range of printing accuracy	22℃ to 30℃	40% to 60%
Change rate	Within 2°C per hour	Within 5 % per hour

- Do not use media which is folded, cut, or torn.
- The size of media can change according to changes in humidity in the printing environment. Before using media, leave media for 30 minutes in the printing environment to adapt it to the environment.

Performing printing without adapting media to the printing environment may cause media jams due to gaps or wrinkles in the media.

Print quality is also affected.

- Do not touch the print side.
 Moisture and oil on your hands may affect the print quality.
- Do not leave media set in the printer for a long time.
 Some media has a tendency to bend, causing media jams and degradation of print quality.
 Avoid using such media especially in winter, in dry conditions, and when printing formal documents.
- Do not discard the individual box and bag. Use them for storing media.

4.2.3 Precaution on storing media


Note the following points on storing media.



- Avoid high temperature, high humidity, and direct sunlight when storing media.
- After removing the unused roll media from the feed unit, wind it properly. Then wrap it with an individual bag and store it in an individual box.
- · Keep the media dry.

4.2.4 Printing area

The printable area of this printer is as follows.

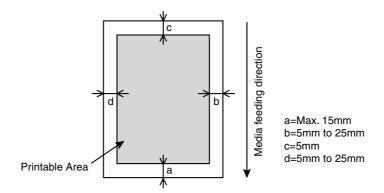

4.2.5 Head height adjustment

Printing with high printing rate or using strongly-curved media can cause print heads to rub. Changing the distance from the print head surface to media (head height) may allow you to avoid head rub.

Head height can be changed to two levels.

Follow the procedure below to change the head height.


4.2.5.1 When raising the print head



- If the head height adjustment lever is raised, high print quality is not guaranteed.
- Do not open the front cover or change the head height during printing.

 If the head height is changed, the alignment will be changed and high print quality will not be guaranteed.

1. Open the front cover.

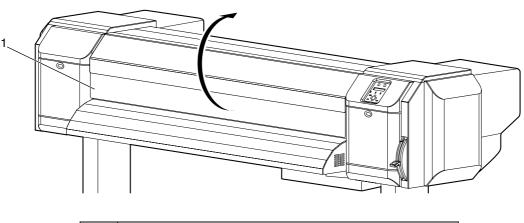


No.	Name
1	Front cover

2. Change the head height by moving the head height adjustment lever (orange).


NOTE

• Do not raise the head height adjustment lever higher than the following position. Doing so may damage the printer.

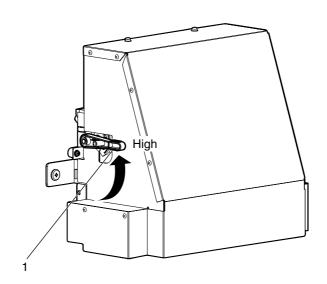

No.	Name	
1	Head height adjustment lever	

- The High lamp on the operation panel lights up in green.
- 3. Close the front cover.

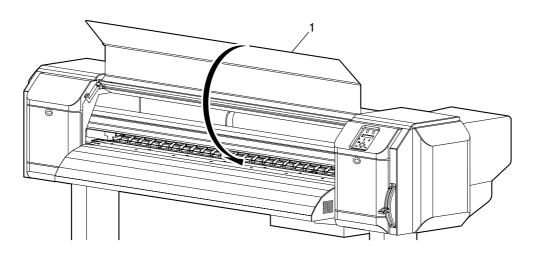


No.	Name
1	Front cover

When returning the print head to the original position 4.2.5.2

NOTE


• Do not open the front cover or change the head height during printing. If the head height is changed, the alignment will be changed and high print quality will not be guaranteed.

1. Open the front cover.

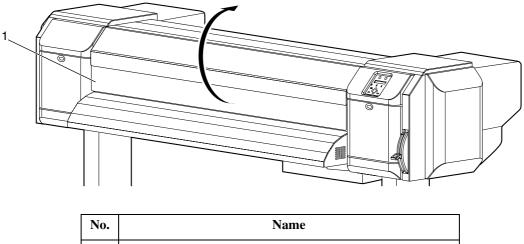

No.		Name	
	1	Front cover	


2. Change the head height by moving the head height adjustment lever (orange).

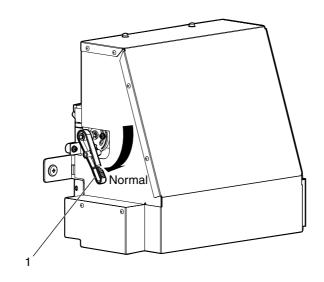

No.	Name	
1	Head height adjustment lever	

The Low lamp on the operation panel lights up in green.

3. Close the front cover.

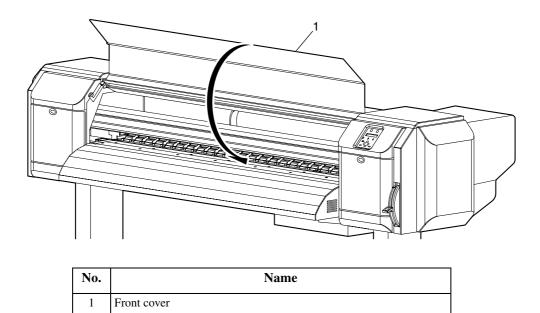

4.2.6 Media feed compensation

This section explains the Media feed compensation.

The feeding length depends on the media type. The following or similar results may be seen in prints.

- Printed images overlap.
- White lines are printed on images.

The accuracy of media feeding may be improved with the following methods.

- 1. Adjust the media feed compensation value. LP 4.2.6.1 Procedure for the media feed compensation value

4.2.6.1 Procedure for the media feed compensation value

- 1. Display the Media feed compensation menu on the operation panel.
 - a. Press the [Menu] key on the operation panel.
 - "Menu 1: Setup>" is displayed on the operation panel.
 - The operation panel shifts to the Setup menu display.
 - b. Press the [>] key on the operation panel.
 - "Set1: MediaType" is displayed on the operation panel.
 - c. Press the [Enter] key on the operation panel.

- "Media: Type 1" is displayed on the operation panel.
- d. Press the [+] key or [-] key on the operation panel to select the media type to use.
- e. Press the [Enter] key on the operation panel.
 - "**>1: Print Mode" is displayed on the operation panel.



- The selected media (Type 1 to 30) is displayed in "**".

 13 5.1.1 MediaType menu
- f. Press the [+] key or [-] key to select "**2: PF Adjust".
- g. Press the [>] key on the operation panel.
 - "PF1: Initial Print" is displayed on the operation panel.
 - Proceed to Media feed compensation menu. \$\tilde{\mathbb{E}}\) 5.1.1.1.2 Dist.Adj menu
- 2. Performs initial adjust print.
 - a. Press the [Enter] key on the operation panel.
 - "Feed Length: 250 mm" is displayed on the operation panel.



- The length of media that is fed (feeding length) for initial adjustment printing is normally set at 250 mm.
- If you increase the feeding length, the accuracy of the Media feed compensation improves.

 To change the feeding length, press the [+] key or [-] key on the operation panel and change the set value.
- b. Press the [Enter] key on the operation panel.
 - "Printing" is displayed on the operation panel.
 - Start Initial adjustment printing.



No.	Name	
1	Feed Length	
2	Media feeding direction	

- When the initial adjustment printing is complete, the printer enters Normal.
- c. After the initial adjustment printing, cut the media. LF 4.4.3 Cutting media
- 3. Measure the distance between the two pluses in the initial adjustment print using a ruler.
- 4. Sets up Initial Adjust Change.
 - a. Press the [+] key or [-] key on the operation panel to select "PF2: Initial Change".
 - b. Press the [Enter] key on the operation panel.
 - "Init.: 250.0/250 mm" is displayed on the operation panel.
 - c. Press the [+] key or [-] key on the operation panel and enter the measured value in step 3.
 - d. Press the [Enter] key on the operation panel.
 - The initial adjustment value is saved.
 - "PF2: Initial Change" is displayed on the operation panel.
- 5. Performs Confirm Print.
 - a. Press the [+] key or [-] key on the operation panel to select "PF3: Confirm Print".
 - b. Press the [Enter] key on the operation panel.
 - "Feed Length: 250 mm" is displayed on the operation panel.




- The length of media that is fed (feeding length) for confirmation adjustment printing is normally set at 250 mm.
- If you increase the feeding length, the accuracy of the Media feed compensation improves.

 To change the feeding length, press the [+] key or [-] key on the operation panel and change the set value.
- c. Press the [Enter] key on the operation panel.
 - "Printing" is displayed on the operation panel.
 - Start Confirmation adjustment printing.




No.	Name	
1	Feed Length	
2	Media feeding direction	

- When the Confirm Print is complete, the printer enters Normal.
- d. After the confirmation adjustment printing, cut the media. \$\tilde{\mathbb{L}}\tilde{\mathbb{L}}\tilde{4}.4.3\$ Cutting media
- 6. Measure the distance between the two pluses in the confirmation adjustment print using a ruler. Then, confirm that the distance matches the feeding length when printing.
 - a. If the distance does not match the feeding length, follow the procedure from Step 1 to Step 5 and readjust.
 - b. If the distance matches the feeding length, proceed to step 7.
- 7. Perform Micro adjustment printing.
 - a. Display the Media feed compensation menu on the operation panel in the same way as in step 1.
 - b. Press the [+] key or [-] key on the operation panel to select "PF4:Micro Print".
 - c. Press the [Enter] key on the operation panel.
 - "Printing" is displayed on the operation panel.
 - Start Micro adjustment printing.

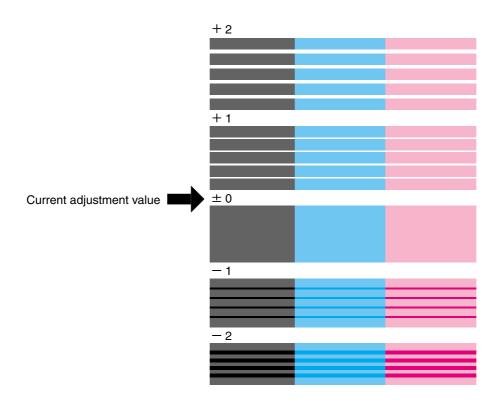

- After the micro adjustment printing is completed, "PF4:Micro Print" is displayed on the operation panel.
- 8. Refer to the illustrations below and check the printing result.

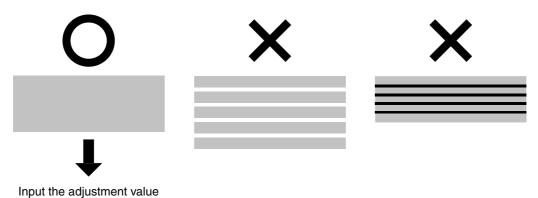

,


9. Sets up Micro Adjustment Change.

- a. Press the [+] key or [-] key to select "PF5:Micro Change".
- b. Press the [Enter] key on the operation panel.
 - "Micro: Opulse" is displayed on the operation panel.
- c. Press the [+] key or [-] key and enter the micro adjustment value according to the printing result in Step 7.
- d. Press the [Enter] key on the operation panel.
 - The micro adjustment value is saved.

- "PF5:Micro Change" is displayed on the operation panel.
- 10. Press the [Cancel] key on the operation panel several times.
 - The operation panel returns to Normal.
 - The adjustment of media feed compensation value is complete.

4.2.6.2 How to fix the media firmly

- 1. Load the roll media to the printer. [2] 3.4.2 Setting roll media
- 2. Lower the media loading lever.

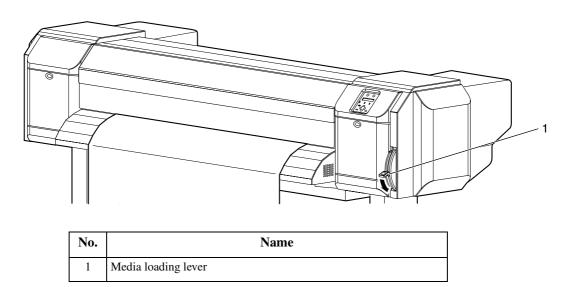

3. Adjust the Media feed compensation value again. Lat. 4.2.6.1 Procedure for the media feed compensation value

4.2.7 Installing media holder plates

Variations in quality and use conditions can cause the edges of the media to curl, resulting in damage to the media by the print head surface.

To prevent this, use the media holder plates to reduce the amount of curling in the media.

Follow the procedure below to install the media holder plates.

- 1. Display the Side margin menu on the operation panel.
 - a. Press the [Menu] key on the operation panel.
 - "Menu 1: Setup>" is displayed on the operation panel.
 - The operation panel shifts to the Setup menu display.
 - b. Press the [>] key on the operation panel.
 - "Set1: MediaType" is displayed on the operation panel.


- c. Press the [+] key or [-] key to select "Set4: Side Margin".
- d. Press the [Enter] key on the operation panel.
 - "Side Margin: ** mm" is displayed on the operation panel.
 - The display shifts to the Side Margin menu. 125.1.4 Side Margin menu

NOTE

- The current setting value is displayed in the "**" of the Side Margin menu.
- 2. Set up the margins (side margins) to 10 mm while printing.
 - a. Press the [+] key or [-] key to select "Side Margin: 10 mm".
 - b. Press the [Enter] key on the operation panel.
 - After having saved the setting, "Set4: Side Margin" is displayed on the operation panel.
 - c. Press the [Cancel] key on the operation panel several times.
 - The operation panel returns to Normal.
- 3. Used to load the roll media. \(\mathbb{E}\) 3.4.2 Setting roll media
- 4. Set the media holder plates by sliding them from both sides of the platen.

NOTE

• Do not use the media holder plates for media whose thickness is $400~\mu m$ (0.4 mm) or thicker. The media holder plate may interfere with the print head.

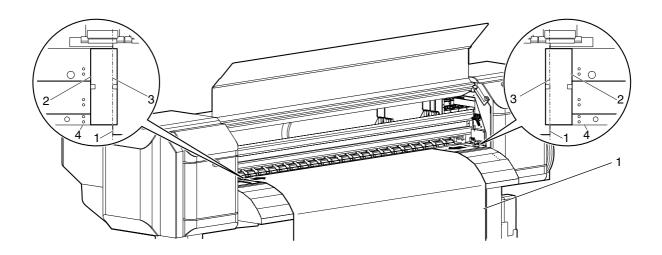

No.	Name	
1	Roll media	
2	Media holder plate	
3	Media loading position	
4	Platen	

5. After installing the media holder plates, make sure that they do not interfere with the media as it is fed through the printer.




- If a media jams when using the media holder plates, the plates may be deformed. When the media holder plates are deformed,
 - Do not remove the clogged media by force.
 - Stop using the printer.

Using the printer with deformed media plates may damage the grid roller or print heads.

Contact your local MUTOH dealer.

NOTE

- If there is interference with the media as it is fed through the printer after the media holder plates have been installed, the media holder plates should not be used.
- 6. If the plates are not used, return the plates to their initial positions as shown in the following figure.

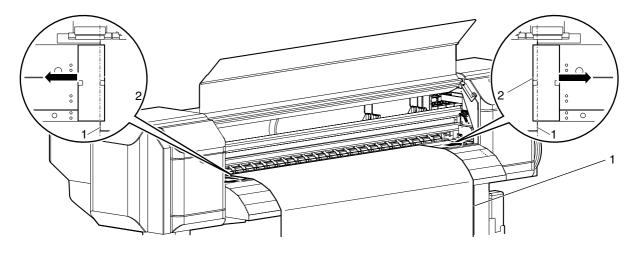


No.	Name	
1	Roll media	
2	Media holder plate	

4.3 Menu setups on the operation panel


4.3.1 Menu setup procedure

Follow the procedure below to configure each setup menu.

- 1. Confirm that the operation panel is Normal.
- 2. Press the [Menu] key on the operation panel.

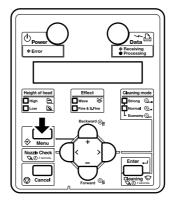

- "Menu 1: Setup>" is displayed on the operation panel.
- The operation panel shifts to the Setup menu display.
- 3. Press the [+] key or [-] key on the operation panel to select a setup item and press the [Enter] key.

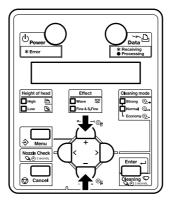


- The settings will be confirmed.
- When setup items have a submenu, the display shifts to the next menu.


NOTE

- When a setup item has a submenu, ">" is displayed on the right end of the LCD monitor of the operation panel.
- For the general outline of each setup item, refer to "4.3.2 Panel setup menu overview".

4. The setting in the blinking part on the LCD monitor of the operation panel can be changed. Press the [+] key or [–] key to change the setting.

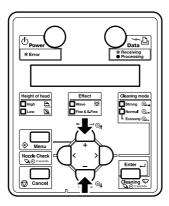


5. To save the changed setting, press the [Enter] key on the operation panel.

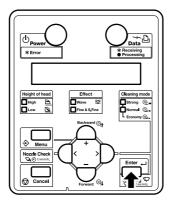

• The setting is saved and the next setup item is displayed.



- If you press the [Cancel] key, [+] key or [-] key without pressing [Enter] key after changing a setting, the change will not be saved.
- 6. Press the [Cancel] key on the operation panel to exit from the setup.

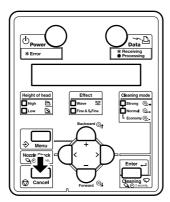

- The previous setup menu is displayed.
- When the main menu is displayed, the screen turns to Normal.

4.3.2 Panel setup menu overview

This sub-section explains the Panel setup menu of the printer. There are the following items in the Panel setup menu.

Setup item	Description
Setup menu	Various settings of the printer are configured.
Test Print menu	Performs nozzle check of the print head and setup list.
Adjust Print menu	Print and adjust test patterns for Alignment.
Cleaning menu	Perform Head cleaning.
Selection menu	Set up the contents of the Setup menu.
Version menu	Displays the versions of the firmware.
Sleep mode menu	Sleep mode settings are configured.



• For details of each setup item, refer to "5 Panel setup menu".

4.4 Operating from the operation panel

This section explains various functions that can be operated from the operation panel.




• For names and functions of each key, refer to "2.2.3 Operation panel".

4.4.1 Feeding media

You can feed roll media at a position that you want.

Follow the procedure below to feed media.

- 1. Confirm that the operation panel is Normal.
- 2. Check that the media loading lever is lowered.
- 3. Press the [Forward \downarrow] key or the [Backward \uparrow] key on the operation panel.

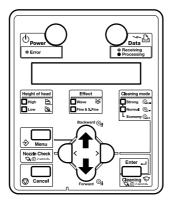


- Media is fed forward or backward.
- 4. Release the [Backward↑] key or [Forward↓] key on the operation panel after feeding media to the desired position.

4.4.2 Stopping printing operation

If you want to stop printing for some reason, operate as follows.

- 1. Stop sending printing data from the computer to the printer.
- 2. Press the [Cancel] key on the operation panel.

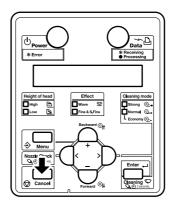

• The printer operates as follows.

Printer status	Operation with the [Cancel] key pressed
During printing	Terminates printing and deletes the remaining data in the printer.
Receiving/converting	Deletes the received/analyzed data and the subsequent data.



• If a large amount of data is saved on the printer, the operation panel may not return to Normal by a single [Cancel] key operation.

In such cases, wait for a few seconds and press the [Cancel] key again.

4.4.3 Cutting media


This sub-section explains how to cut roll media.



• When printing is finished, the media guide is at high temperature. Wait until the media guide cools off.

Follow the procedure below to cut roll media.

- 1. Verify the following regarding the operational condition of the product.
 - Printing or other operations are not in progress.
 - The operation panel display is Normal.
- 2. If the roll media cut position is changed, refer to "4.4.1 Feeding media" and advance the roll media to the desired cut position.
- 3. Open the front cover.

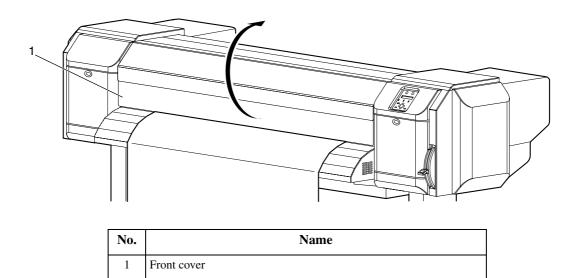


4. Place a razor blade on the media cut groove on the media guide, and cut the roll media.



- Pay attention to the following points when you cut roll media.

 Mishandling the razor blade may cause a cut on your finger or hand.
 - When you hold media, do not place your finger on the media cut groove.
 - Move the razor blade along the media cut groove.

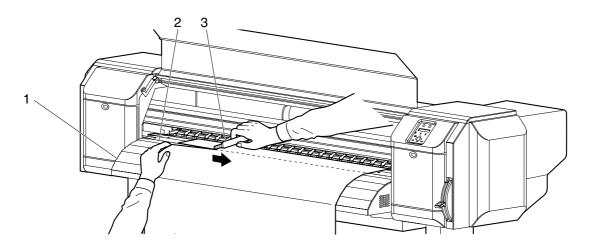

No.	Name	
1	Media guide	
2	Media cut groove	
3	Razor blade	

• Cutting roll media is complete.



• When loading the new roll media, cut the front edge of the media if it is not straight.


4.4.4 Changing and confirming settings while printing

While the printer is operating, you can change or confirm settings for the Panel setup menu.

4.4.4.1 Procedure for changing and confirming settings while printing

Follow the procedure below to change or confirm settings for the Panel setup menu.

- 1. Confirm that the printer is in one of the following conditions.
 - Receiving
 - Converting
 - Printing
 - · Warming up
- 2. Press the [Menu] key on the operation panel.

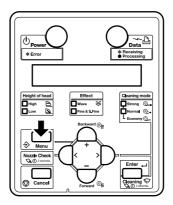

- "Menu 1: Print Start" is displayed on the operation panel.
- 3. Press the [+] key or [-] key to change or confirm settings.



• For the setting items whose settings can be changed or confirmed, refer to "4.4.4.2 Settings that can be changed or confirmed while printing".

4.4.4.2 Settings that can be changed or confirmed while printing

NOTE

- The Print start menu is displayed only when the printer is warming up.
- When you change a setting during operation, be sure to select "Backup" to save the setting that you changed.

If the printer returns to Normal without "Backup" being selected, the changed setting is not saved.

Setup item	Setting	Description
Print Start	_	• [Enter] key: If the heater temperature does not reach the set value during warming-up, printing starts.
Temperature	Pre	Check the current Pre Heater temperature.
	Platen	Check the current Platen Heater temperature.
	After	Check the current Drier temperature.
Pre Heater	Off / 30 °C to 50 °C	Change the Pre Heater temperature.
Platen Heater	Off / 30 °C to 50 °C	Change the Platen Heater temperature.
After Heater	Off / 30 °C to 50 °C	Change the Drier temperature.
PF Adjust	-20 pulse to 0 to 20 pulse	Change the feed adjustment value.
Backup	_	• [Enter] key: Save the changed setting.
	_	[Cancel] key: The printer returns to Normal.


4.4.5 Pausing printing

It is possible to pause to print during printing.


Follow the procedure below to pause or restart printing.

NOTE

- If the printing is paused, the print quality will not be guaranteed.
- 1. Check that the printer is in operating.
- 2. Press the [-] key on the operation panel.

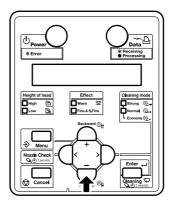

- The printer pauses printing.
- "PrintRestart -> ENTER" is displayed on the operation panel.
- 3. To restart printing, press the [Enter] key on the operation panel.

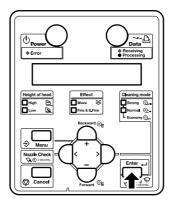

• The printer restarts printing.

5 Panel setup menu

The section explains the Setup menu of the printer.

Setup item	Description	
Setup menu	Various settings of the printer are configured.	
	5.1 Setup menu	
Test Print menu	Performs nozzle check of the print head and setup list.	
	至 5.2 TestPrint Menu	
Adjust Print menu	Sets up when adjusting the printer for the optimum quality of image print.	
	「全 5.3 Adjust Print menu	
Cleaning menu	Perform Head cleaning.	
	文章 5.4 Cleaning menu	
Selection menu	Sets up the contents of the Setup menu.	
	「全 5.5 Selection menu	
Version menu	Displays the versions of the firmware.	
	できた。Version menu	
Sleep mode menu	Sleep mode settings are configured.	
	文章 5.7 Sleep mode menu	



- The <> parts in each list are factory default settings (initial values).
- For details of the Setup menu, refer to the following manual.

 **EPQUICK REFERENCE "Setup menu diagram"

5.1 Setup menu

Various settings of the printer are configured.

Setup item	Description
MediaType	Settings for the media type to print is configured. • [Enter] key: shifts to the sub menu. 【實 5.1.1 MediaType menu
Effect	Sets up the Effect menu. • [Enter] key: shifts to the sub menu. 【實 5.1.2 Effect menu
Flushing	Sets up the Flushing operation while printing. • [Enter] key: shifts to the sub menu. 13 5.1.3 Flushing menu
Side Margin	Specifies the right and left margins of printed media. • [Enter] key: shifts to the sub menu. 【實 5.1.4 Side Margin menu
Media Initial	Decides whether to detect the width and front edge of the media when initializing the media. • [Enter] key: shifts to the sub menu. • 5.1.5 Media Initial menu
Media Width/MediaWidth Check	Specifies the media width between the loading mark and the left end if media detection is not performed during media initialization. Displays the detected media width if media detection is performed during media initialization. • [Enter] key: shifts to the sub menu. \$\tilde{\til
Take-up	Set the operation of the optional winding unit. • [Enter] key: shifts to the sub menu. **\tilde{\text{LF}} 5.1.7 Winding unit menu
Origin	Sets the beginning of printing (origin) of the print data. • [Enter] key: shifts to the sub menu. **E 5.1.8 Origin menu*
Prev. Stick	Sets up to prevent media from sticking when printing starts. • [Enter] key: shifts to the sub menu. 1 5.1.9 Prev. Stick menu
HeadFan	Sets up head fan operation. • [Enter] key: shifts to the sub menu. **\tilde{\text{LF}} 5.1.10 HeadFan menu
CR Movement	Sets up the range that the print head moves while printing. • [Enter] key: shifts to the sub menu. **\tilde{\text{LF}} 5.1.11 CR Movement menu
OverwriteCnt	Sets up the overwrite count per line. • [Enter] key: shifts to the sub menu. LF 5.1.12 Overwrite count menu
Overwrite Wait	Sets up the waiting time while overwrite printing. • [Enter] key: shifts to the sub menu. **E*\begin{align*} \text{**E*} 5.1.13 Overwrite Wait menu

Setup item	Description
Slant Check	Sets up slanting detection during media loading. • [Enter] key: shifts to the sub menu. **\tilde{\text{LE}} 5.1.14 Slant Check menu
Auto Cleaning	Sets up the time for auto cleaning during printing. • [Enter] key: shifts to the sub menu. **\tilde{\text{\substack}} 5.1.15 Auto Cleaning menu*
Ink Status	Displays information of S/C card (ink status) installed in the ink pack slot. • [Enter] key: shifts to the sub menu. [2] 5.1.16 Ink Status menu
Roll Length	Sets up the roll media length. • [Enter] key: shifts to the sub menu. LE 5.1.17 Roll Length menu
Head Wash	Performs Head washing. • [Enter] key: shifts to the sub menu. 13 5.1.18 Head Wash menu
CR Maint.	Performs maintenance. • [Enter] key: shifts to the sub menu. 【實 5.1.19 CR Maintenance menu
Initialization	Returns the settings of the printer to default. • [Enter] key: shifts to the sub menu. **T\$ 5.1.20 Initialization menu
Life Times	Displays the operational life time of each part. • [Enter] key: shifts to the sub menu. **\tilde{\text{Life Times menu}} 5.1.21 Life Times menu
IP Address	Sets the IP address of the printer. • [Enter] key: shifts to the sub menu. [# 5.1.22 IP Address menu
Subnet Mask	Sets the subnet mask of the printer. • [Enter] key: shifts to the sub menu. 13 5.1.23 Subnet Mask menu
Gateway	Sets the gateway. • [Enter] key: shifts to the sub menu. \[\subseteq 5.1.24 \text{ Gateway menu} \]
Temporary	Displays the settings of "Off" or "ALL Off" in the Selection menu in the Setup menu temporarily. • [Enter] key: returns to the previous menu with all set up items displayed. • [Cancel] key: returns to the previous status in the Selection menu when the Setup menu is displayed. **Enter: Th
_	• [Cancel] key: shifts to the previous menu. 13 Panel setup menu

5.1.1 MediaType menu

Settings for the media type to print is configured.

Setup item	Setting	Description
Media	Type 1	Settings for the media type to print is configured.
	Type 2 It is possible to set 30 different user setting for printing.	It is possible to set 30 different user settings as "Type 1 to 30" for printing.
	•••	• [Enter] key: shifts to the sub menu. \[\mathbb{L}\mathbb{E}^2 5.1.1.1 \] User media menu
	Type 29	As 3.1.1.1 Oser media menu
	Type 30	
	_	• [Cancel] key: saves the setting and shifts to the previous menu. 13 5.1 Setup menu

5.1.1.1 User media menu

Various settings on the user media are configured.

In the User media menu, 30 different settings can be set as "Type 1 to 30" for the following printing operation.

NOTE

- If media other than recommended one (user media) is used, the following problems may occur.
 - Media detection error
 - Slant, snag and wrinkle of media
 - Media jams
 - Favorable print quality cannot be obtained due to blots, blurs or dirt of ink.
 - End detection of roll media cannot be performed, etc.

The problems caused by the use of user media will not be covered by the warranty and repair expenses will be paid by the customer.

For details, contact your local MUTOH dealer.

Setup item	Setting	Description
Type 1 to 30	Print Mode	Sets up the print mode according to the usage of print data or print speed. • [Enter] key: shifts to the sub menu. **E5.1.1.1.1 Print Mode menu
	PF Adjust	Sets up various settings on the Media feed compensation. • [>] key: shifts to the sub menu. **T\$\mathbb{T}\$ 5.1.1.1.2 Dist.Adj menu
	Pre Heater	Sets up the Pre Heater temperature. • [Enter] key: shifts to the sub menu. **E** 5.1.1.1.3 Pre Heater menu
	Platen Heater	Sets up the Platen Heater temperature. • [Enter] key: shifts to the sub menu. \[\mathbb{E} 5.1.1.1.4 Platen Heater menu \]
	After Heater	Sets up the Drier temperature. • [Enter] key: shifts to the sub menu. 【管 5.1.1.1.5 Drier menu
	StandbyHeating	Sets up the length of time to preheat the heater while the printer is in standby mode. • [Enter] key: shifts to the sub menu. **T\$\mathbb{E}\$ 5.1.1.1.6 StandbyHeating menu
	Vacuum Fan	Sets up vacuum fan operation. • [Enter] key: shifts to the sub menu. 【智 5.1.1.1.7 Vacuum Fan menu
	_	[Cancel] key: shifts to the previous menu. [S] 5.1.1 MediaType menu

5.1.1.1.1 Print Mode menu

Settings for print quality (print mode) are set according to the usage of print data or print speed.



• When "Banner 1" or "Banner 2" is set in the Print Mode menu, "PalettePrint" is not displayed in the Test Print menu.

至5.2 TestPrint Menu

Setting	Description
Quality 1	Sets up print mode.
Quality 2	• Quality 1 to 4: Sets up to perform high quality printing.
Quality 3	Graphics 1 to 2: Sets up to perform standard printing.
Quality 4	• Banner 1 to 4:
Graphics 1	Sets up to perform high speed printing. Displays details of each print mode while pressing [>] key.
<graphics 2=""> CF Details of print mode</graphics>	Te Details of print mode
Banner 1	
Banner 2	
Banner 3	
Banner 4	
_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. [Each of the previous menu.
	Quality 1 Quality 2 Quality 3 Quality 4 Graphics 1 <graphics 2=""> Banner 1 Banner 2 Banner 3</graphics>

Details of print mode

The settings for print quality registered in each print mode are as follows.

Print Mode	Resolution	Print speed	Pass	Direction
Quality 1	1440×1440 dpi	Q (high quality)	8 times	Uni (unilateral)
Quality 2	1440×720 dpi	Q (high quality)	4 times	Uni (unilateral)
Quality 3	720×720 dpi	Q (high quality)	4 times	Uni (unilateral)
Quality 4	720×720 dpi	Q (high quality)	4 times	Bi (bidirectional)
Graphics 1	720×720 dpi	N (normal)	4 times	Uni (unilateral)
Graphics 2	720×720 dpi	N (normal)	4 times	Bi (bidirectional)
Banner 1	540×720 dpi	N (normal)	3 times	Uni (unilateral)
Banner 2	540×720 dpi	N (normal)	3 times	Bi (bidirectional)
Banner 3	720×720 dpi	Q (high quality)	2 times	Uni (unilateral)
Banner 4	720×720 dpi	Q (high quality)	2 times	Bi (bidirectional)

5.1.1.1.2 Dist.Adj menu

Sets up various settings on the Media feed compensation.

Setup item	Setting	Description
PF	Initial Print	Performs initial adjust print. • [Enter] key: shifts to the sub menu. [T] (1) Initial Print menu
	Initial Change	Sets up Initial Adjust Change. • [Enter] key: shifts to the sub menu. [2] (2) Initial Change menu
	Confirm Print	Performs Confirm Print. • [Enter] key: shifts to the sub menu. [27] (3) Confirm Print menu
	Micro Print	Performs Micro Adjustment Print. • [Enter] key: shifts to the sub menu. \(\mathbb{E}\) (4) Micro Print menu
	Micro Change	Sets up Micro Adjustment Change. • [Enter] key: shifts to the sub menu. **T\$\mathbb{E}\$ (5) Micro Change menu
	_	• [Cancel] key: shifts to the previous menu. 13 5.1.1.1 User media menu

(1) Initial Print menu

Performs initial adjust print.

Setup item	Setting	Description
Feed Length	100mm to <250 mm> to 500 mm	Changes the length (feed length) of the media feed direction for initial adjust print. • [Enter] key: Determines the setting. "Printing" is displayed on the operation panel and initial adjust print starts. After printing, the printer enters Normal.
	_	• [Cancel] key: cancels the setting and shifts to the previous menu. 【實 5.1.1.1.2 Dist.Adj menu

(2) Initial Change menu

Sets up Initial Adjust Change.

Setup item	Setting	Description
Init.	<initial menu="" print="" setting="" value=""> ± 50.0 mm</initial>	Sets up Initial Adjust Change.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\int_{\infty} 5.1.1.1.2\$ Dist.Adj menu

(3) Confirm Print menu

Performs Confirm Print.

Setup item	Setting	Description
Feed Length	100 mm to <250 mm> to 500 mm	Changes the length (feed length) of the media feed direction for Confirm Print. • [Enter] key: Determines the setting. "Printing" is displayed on the operation panel and initial adjust print starts. After printing, the printer enters Normal.
	_	[Cancel] key: cancels the setting and shifts to the previous menu. [S] 5.1.1.1.2 Dist.Adj menu

(4) Micro Print menu

Performs Micro Adjustment Print.

Setup item	Setting	Description
Micro Print	Printing	Prints the following PF pattern (micro adjustment) with a focus on the micro adjustment value. • Printing interval: ±1 pulse
	_	• [Cancel] key: shifts to the previous menu. Stops printing and returns to the previous menu if printing is in progress. 【實 5.1 Setup menu

(5) Micro Change menu

Sets up Micro Adjustment Change.

Setup item	Setting	Description
Micro Change	-20 pulse to <0 pulse> to 20 pulse	Sets up Micro Adjustment Change.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\mathbb{E}\$ 5.1 Setup menu

5.1.1.1.3 Pre Heater menu

Sets up the Pre Heater temperature.

Set up to preheat the media before printing and insulate the temperature change in the printer section.

NOTE

• Preset temperature of Pre Heater varies depending on the media. For preset temperature of Pre Heater, refer to the "Recommended media list".

Setup item	Setting	Description
Pre Heater	Off / <30° C> to 50° C	Sets up the Pre Heater temperature.
		1.Roll media 2.Pre Heater 3.Print head
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous
		menu. 【實 5.1.1.1 User media menu

5.1.1.1.4 Platen Heater menu

Sets up the Platen Heater temperature.

Set up this menu to warm up ink and improve print quality.



• Preset temperature of Platen Heater varies depending on the media. For preset temperature of Platen Heater, refer to the "Recommended media list".

Setup item	Setting	Description
Platen Heater	Off / <30° C> to 50° C	Sets up the Platen Heater temperature.
		1.Roll media 2.Platen Heater
		3.Print head
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\tilde{\text{LF}}\$ 5.1.1.1 User media menu

5.1.1.1.5 Drier menu

Sets up the Drier temperature. Set this menu to dry printed media.



• Preset temperature of Drier varies depending on the media. For preset temperature of Drier, refer to the "Recommended media list".

Setup item	Setting	Description
After Heater	Off / <30° C> to 50° C	Sets up the Drier temperature.
	_	 1.Roll media 2.After Heater 3.Print head • [Enter] key: saves the setting and shifts to the previous menu. • [Cancel] key: cancels the setting and shifts to the previous menu. \(\mathbb{E} \) 5.1.1.1 User media menu

5.1.1.1.6 StandbyHeating menu

Sets up the length of time to preheat the heater while the printer is in standby mode.

Setup item	Setting	Description
StandbyHeating	10 min to <60 min> to 240 min	Sets the length of time to preheat the heaters. When more than the set time has passed, each heater turns off.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\mathbb{E}\$ 5.1.1.1 User media menu

5.1.1.1.7 Vacuum Fan menu

Sets up vacuum fan operation.

Setup item	Setting	Description
Vacuum Fan	Low	Set when there is a possibility of a paper jam caused by failure in media loading when using soft media.
	<high></high>	Set when using general media.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\sum_{20}\$ 5.1.1.1 User media menu

5.1.2 Effect menu

Sets up the Effect menu.

Set up this menu when you want to improve print quality by adjusting the set print mode.



• The print quality may not be improved depending on the printing condition.

Setup item	Setting	Description
Effect	None 1 None 2	The Effect function is not used. If obvious white lines or uneven print density appear on printed media in "None 1", set to "None 2".
	Wave 1	The printing joint will be the wave form. It will be improved the print quality.
	Wave 2	If obvious white lines or uneven print density appear on printed media in "Wave 1", set to "Wave 2".
	Fuzz 1	The printing joint will shade off as the wave form.
	Fuzz 2	Set up this menu when obvious white lines or uneven print density appear on printed media in "Wave". If obvious white lines or uneven print density appear on printed media in "Fuzz 1", set to "Fuzz 2".
	Fine&Wave 1	Perform printing at a slow speed compared with "Wave". Set up this menu when improving the print quality compared
	<fine&wave 2=""></fine&wave>	with "Wave". If obvious white lines or uneven print density appear on printed media in "Fine&Wave 1", set to "Fine&Wave 2".
	Fine&Fuzz 1	Perform printing at a slow speed compared with "Fuzz". Set up this menu when improving the print quality compared
	Fine&Fuzz 2	with "Fuzz". If obvious white lines or uneven print density appear on printed media in "Fine&Fuzz 1", set to "Fine&Fuzz 2".
	A-S.Fine&Wave	Performs "Wave" printing using the left side of the of the print head. Since only the print head on one side is used, printing speed becomes half of "Wave 1 to 2". Set up this menu when improving the print quality compared with "Fine&Wave 1 to 2".
	B-S.Fine&Wave	Performs "Wave" printing using the right side of the of the print head. Since only the print head on one side is used, printing speed becomes half of "Wave 1 to 2". Set up this menu when improving the print quality compared with "Fine&Wave 1 to 2".
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\mathbb{E}\$ 5.1 Setup menu

5.1.3 Flushing menu

Sets up the Flushing operation while printing.

Setup item	Setting	Description
Flushing	Origin	Perform the flushing operation to return to the original flushing box every time the print head goes and returns. • [Enter] key: saves the setting and shifts to the previous menu. **T\$\mathbb{E}\$ 5.1 Setup menu
	<on media=""></on>	Perform the flushing operation on the page margins. Improve the print quality since returning to the original flushing box. • [Enter] key: saves the setting and shifts to the sub menu.
	_	• [Cancel] key: cancels the setting and shifts to the previous menu. **\tilde{\mathbb{E}} 5.1 \text{ Setup menu}

5.1.3.1 Flushing return count menu

Set the frequency (flushing return count) that the print head returns to the original flushing box when setting "On Media" in the Flushing menu.



• When increasing the flushing return count, clogging may occur while printing continuously.

Setup item	Setting	Description
ReturnCount	Once to <5 times> to 999 times	Set the flushing return count. Example Once: return to the flushing box on the original side every time the print head goes and returns. times: return to the flushing box on the original side every time the print head goes and returns five times.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\mathbb{E}\$ 5.1 Setup menu

5.1.4 Side Margin menu

Set up the right and left margins (side margins) while printing.

NOTE

- When setting "On Media" in the Flushing menu, the value of the Side Margin menu is disabled and the margin to perform the flushing operation is set automatically.

 13 Tlushing menu
- When using the media holder plate, set the side margin to 10 mm. \$\tilde{2}\) 4.2.7 Installing media holder plates

Setup item	Setting	Description
Side Margin	<5 mm> to 25 mm	Set the side margins.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\sum_{5.1}\$ Setup menu

5.1.5 Media Initial menu

Decides whether to detect the width and front edge of the media when initializing the media.



• Set the media width that is set in the Media Width menu when setting "Off" in the Media detection menu,

125.1.6 Media Width/MediaWidth check menu


Setup item	Setting	Description
Init.	Off	The media is not detected.
	Top&Width	Detect the media width and edge while initializing the media.
	<width></width>	Detect the media width while initializing the media.
		 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. 文章 5.1 Setup menu

5.1.6 Media Width/MediaWidth check menu

Set up the distance between the right end from 5 mm and the left end if media detection is not performed when initializing the media.

取(1) Media Width menu

Displays the detected media width if media detection is performed during media initialization. [2] MediaWidth check menu

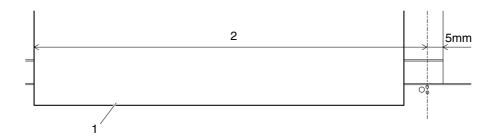

No.	Name
1	Roll media
2	Media width

(1) Media Width menu



• Setting a larger value than the media width set in the Media Width menu may cause ink to leak on the media or printer.

Setup item	Setting	Description
Media Width	<1,000 mm> to 1,625 mm	Set the media width.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. [Xightarrow 5.1.1.1 User media menu

(2) MediaWidth check menu

Setup item	Setting	Description
MediaWidth	**** mm	Display the media width that is detected while initializing.
	_	• [Cancel] key: shifts to the previous menu.

5.1.7 Winding unit menu

Set the operation of the optional winding unit.

NOTE

- When the winding unit is not installed, please do not set to "Type 1". By doing so, the product will be unable to function properly.
- When the Winding unit menu is set to "Type 1", the setting for the Prev. Stick menu is disabled. \(\) \(\) \(\) Prev. Stick menu



• For details about the optional winding unit, contact your local MUTOH dealer.

Setup item	Setting	Description
Take-up	<off></off>	No use of winding unit.
	Type 1	Set to "Type 1" to use the optional winding unit.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \(\mathbb{E} \) 5.1 Setup menu

5.1.8 Origin menu

Sets the beginning of printing (origin) of the print data.

Set the menu when reprinting on the margin with changing the printing data position to the printed media.

Setup item	Setting	Description
Origin	X (print head transferring distance): 00000 mm to 99,999 mm Y (media feeding distance): 00000 mm to 9,999 mm	Change the print head position and media feeding distance with the following keys. • [>] key: Decrease the print head transferring distance. • [<] key: Increase the print head transferring distance. • [+] key: Increase the media feeding distance. • [-] key: Decrease the media feeding distance.
		Y 2
		1.Starting position 2.Media feeding direction • [Enter] key: "Moving Origin Pos." is displayed on the operation panel and the print head moves to the starting position. The following contents is displayed on the operation panel.
	Confirm Position→Enter	[Enter] key or after a certain period of time: Determines the setting. Print head returns to the original position. Save the setting and shift to the previous menu. [\$\mathbb{E}\$ 5.1 Setup menu
	_	[Cancel] key: cancels the setting and shifts to the previous menu. [S 5.1 Setup menu]

5.1.9 Prev. Stick menu

Sets up to prevent media from sticking when printing starts.



• When the Winding unit menu is set to "Type 1", the setting for the Prev. Stick menu is disabled. \$\tilde{\mathbb{E}}\)5.1.7 Winding unit menu

Setup item	Setting	Description
Prev. Stick	Off	The sticking operation is not performed.
	<on></on>	The sticking operation is performed. Feed the media back and forth to prevent from sticking.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\mathbb{E}\$ 5.1 Setup menu

5.1.10 HeadFan menu

Sets up head fan operation.

If print blurring or dot losses occur, activate the head fan.

Setup item	Setting	Description
HeadFan	<off></off>	Not activate the fan.
	On	Activates the fan.
	_	[Cancel] key: saves the setting and shifts to the previous menu. [S] 5.1 Setup menu

5.1.11 CR Movement menu

Sets up the range that the print head moves while printing.

Setup item	Setting	Description
CR Movement	<data></data>	The print head changes the range of the print data width. Improve the print speed since decreasing the transferring range of the print head.
	Machine	The print head moves from origin to the maximum paper width.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \(\mathbb{E}\) 5.1 Setup menu

5.1.12 Overwrite count menu

Sets up the overwrite count per line.

Setup item	Setting	Description
OverwriteCnt	<once> to 9 times</once>	Set the overwrite count.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\tilde{\mathbb{E}}\$ 5.1 Setup menu

5.1.13 Overwrite Wait menu

Sets up the waiting time while overwrite printing.



• Narrow media may not be warmed enough by the heater causing less print quality. In this case, set the Overwrite Wait time and warm up the media.

Setup item	Setting	Description
Overwrite Wait	<0.0 sec.> to sec.0.1 sec. to 5.0 sec.	Set the Overwrite Wait time.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. IF 5.1 Setup menu

5.1.14 Slant Check menu

Sets up slanting detection during media loading.

Setup item	Setting	Description
Slant Check	Off	Slant Check is not performed.
	<on></on>	Slant Check is performed.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. X\$\mathbb{E}\$5.1 Setup menu

5.1.15 Auto Cleaning menu

Set the auto cleaning interval of this printer.

When more than the set time has passed since the previous print job, the print head is cleaned automatically before printing starts to prevent it from clogging.

Setup item	Setting	Description
Auto Cleaning	Off	The auto cleaning is not performed.
	1 hours	When more than the set time has passed, the print head is
	2 hours	cleaned automatically before printing starts.
	3 hours	
	4 hours	
	5 hours	
	<6 hours>	
	9 hours	
	12 hours	
	18 hours	
	24 hours	
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. 【管 5.1 Setup menu

5.1.16 Ink Status menu

Displays information of S/C card (ink status) installed in the ink pack slot.



• When displaying the Ink Status menu, use the genuine ink pack.

If you use an ink pack other than the genuine one, ink status is not displayed correctly.

Setup item	Setting	Description
KkCcMmYy	0 to 100 (Unit: %)	Residual ink quantity of K, C, M and Y color is displayed.
	_	• [Cancel] key: shifts to the previous menu.

5.1.17 Roll Length menu

Sets up the roll media length.

Setup item	Setting	Description
Roll media	<0ff>	Roll Length is not used. • [Enter] key: saves the setting and shifts to the previous menu. **E** 5.1 Setup menu
	Roll 1	Sets up the roll media length.
	Roll 2	The Roll Length setting is set for three types as "Roll 1" to "Roll 3".
	Roll 3	• [Enter] key: saves the setting and shifts to the sub menu. \$\sum_{5.1.17.1}\$ Roll media length menu
	_	[Cancel] key: cancels the setting and shifts to the previous menu. [Section 1] Telephone 1. Telephone 2. Telepho

5.1.17.1 Roll media length menu

Sets up the roll media length.



• When replacing the roll media, adjust the roll media length again.

If the roll media length is not set, the residual quantity of roll media is not displayed correctly.

Setup item	Setting	Description
Length	1m to <30 m> to 99 m	Set the roll media length.
	_	 [Enter] key: saves the setting and shifts to the previous menu. [Cancel] key: cancels the setting and shifts to the previous menu. \$\tilde{\mathbb{E}}\$ 5.1 Setup menu

5.1.18 Head Wash menu

Performs Head washing.



• Make sure to use a dedicated cleaning fluid (model No.: VJ-BIOINK1-CL880).

Setup item	Setting	Description
Head Wash	Start	Performs Head washing. • [Enter] key: Perform the Head washing operation. The following contents is displayed on the operation panel.
	Remove Cartridges	Remove the ink pack, and install the cleaning fluid pack. LE 6.1.1 Replacing ink packs
	_	[Cancel] key: shifts to the previous menu without Head washing. [S 5.1 Setup menu]

5.1.19 CR Maintenance menu

Performs maintenance.

Use this to perform the following daily maintenance shown below.

- When replacing the flushing-box sponges.
 工管 6.1.3 Replacing the flushing-box sponges
- When clean the cleaning wiper unit and the outside of the print head. 136.2.4 Cleaning the cleaning wiper unit and around the print head

NOTE

• When the CR maintenance menu is displayed, even leaving the keys untouched for three minutes does not return to the printer to normal status.

12.3 Printer status

Setup item	Setting	Description
CR Maint.	Start	Performs maintenance. • [Enter] key: The print head moves to the left. The cleaning wiper raises.
	End	Completes maintenance. • [Enter] key: The print head returns to its original position. The cleaning wiper returns to its original position.
	_	[Cancel] key: shifts to the previous menu without maintenance. [Solution 1] Setup menu

5.1.20 Initialization menu

Returns the settings of the printer to default.

Setup item	Setting	Description
Initialization	ALL	All settings can be returned to factory default.
	MediaType	The settings of the MediaType menu is returned to factory default.
	Except MediaType	The settings value other than the MediaType menu is returned to factory default.
	_	 [Enter] key: "Initialing" is displayed on the operation panel and the printer initializes the setting. [Cancel] key: shifts to the previous menu without initialization. [Xill 5.1] Setup menu

5.1.21 Life Times menu

Displays the operational life time of each part.

Setup item	Setting	Description
Life Times	Head	Display the operational life of each part.
	Pump	• The operational life of a part is indicated by five asterisks (100 %).
	CR Motor	• As the part deteriorates, the number of asterisks decreases one by one (20 %).
	PF Motor	The part should be changed when all of the asterisks have disappeared, and "Change" is displayed. Contact your local MUTOH dealer to ask for replacing parts.
	_	• [Cancel] key: shifts to the previous menu. 工資5.1 Setup menu

NOTE

- When replacing a part that its operational life has ended,
 - No charge for replacing within the warranty period or under the contract.
 - You are liable for the cost of repairs under conditions other than mentioned above.
- Do not keep using the part which has reached its life span. Problems caused by doing so will not be covered by the warranty.

5.1.22 IP Address menu

Sets the IP address of the printer.



• Be sure to set the IP address after consulting the network administrator.

Setup item	Setting	Description
IP Address	000.000.000.000 to <192.168.001.253> to 255.255.255.255	Change the IP address to operate the following keys. • [+] key: increases the setting value. • [-] key: decreases the setting value. • [Enter] key: changes the setting for the next segment.
	_	[Cancel] key: saves the setting and shifts to the previous menu. [Solution of the content of the cont

5.1.23 Subnet Mask menu

Sets the subnet mask of the printer.



• Be sure to set the subnet mask after consulting the network administrator.

Setup item	Setting	Description
Subnet Mask	000.000.000.000 to <255.255.255.000> to 255.255.255.255	Change the subnet mask to operate the following keys. • [+] key: increases the setting value. • [-] key: decreases the setting value. • [Enter] key: changes the setting for the next segment.
	_	[Cancel] key: saves the setting and shifts to the previous menu. [5.1 Setup menu]

5.1.24 Gateway menu

Sets the gateway.



• Be sure to set the gateway after consulting the network administrator.

Setup item	Setting	Description
Gateway	000.000.000.000 to <192.168.001.254> to 255.255.255.255	Change the gateway to operate the following keys. • [+] key: increases the setting value. • [-] key: decreases the setting value. • [Enter] key: changes the setting for the next segment.
	_	[Cancel] key: saves the setting and shifts to the previous menu. [Solution 1] Setup menu

5.2 TestPrint Menu

Performs nozzle check of the print head and setup list.



• When "Banner 1" or "Banner 2" is set in the Print Mode menu, "PalettePrint" is not displayed. \$\tilde{L}\tilde{S}\tilde{5}\tilde{1}\tild



• Refer to the following for the operation procedure of test print.

13.5 Test print

Setup item	Description	
Nozzle check	Perform the nozzle check printing. It is used to check whether there are any clogged heads, or missing or blurred prints. **T3.5.1 Nozzle check**	
Mode print	Mode print can be performed. Used to confirm the following printing conditions. • Print quality • Effect • Pre Heater temperature • Platen Heater temperature • Drier temperature • Adjustment value LP 3.5.2 Mode print	
Set List	Setup list printing is performed. Use it for checking the setup item of the printer. 13 3.5.3 Setup print	
ALL Set List	Setup list printing is performed. Use it for checking the setup item, user media and print mode of the printer. 3.5.3 Setup print	
Palette	Palette printing is performed. It is used to compare pen colors of the computer with colors of the printer. 3.5.4 Palette print	
_	 [Enter] key: "Printing" is displayed on the operation panel and test printing starts. [Cancel] key: shifts to the previous menu. \$\tilde{L}^2 5\$ Panel setup menu 	

5.3 Adjust Print menu

Sets up when adjusting the printer for the optimum quality of image print (Alignment).

Alignment must be set every printing mode.

工 3.6 Adjust print

After selected the using printing mode, perform alignment.

13 5.1.1.1.1 Print Mode menu

Setup item	Description	
Confirm	Print the test pattern for the alignment.	
Bi-D Quality	Sets up the set value when performing two-way printing in the quality priority mode.	
Bi-D Normal	Sets up the setting when performing two-way printing in the normal mode.	
_	 [Enter] key: "Printing" is displayed on the operation panel and test pattern printing starts. [Cancel] key: shifts to the previous menu. \$\infty\$ Panel setup menu 	

5.4 Cleaning menu

Perform Head cleaning.



• Head cleaning can be operated when the printer is Normal. Refer to the following for operation procedures.

126.2.3 Head cleaning

Setup item	Description	
Economy	Discharges smaller amount of ink compare to "Normal".	
Normal	Select this mode normally.	
Strong	Discharges larger amount of ink compare to "Normal". Used when the print head does not improve by normal Head cleaning.	
Little charge	Refills a small amount of ink. Charge a small amount of ink when printing is not stable after ink replenishment. 3.3 Installing ink packs	
_	 [Enter] key: "Cleaning **%" is displayed on the operation panel and Head cleaning starts. Progress on the Head cleaning is displayed in % on the operation panel. [Cancel] key: shifts to the previous menu. \$\mathbb{E}\$ 5 Panel setup menu 	

5.5 Selection menu

Sets up the contents of the Setup menu.

You can make setup items that you do not normally use invisible.

Switch the setting "On (displayed)" to "Off (undisplayed)" using the [<] key or [>] key on the operation panel.

When the setting is On, "*" is displayed on the operation panel.



• Even if you select "Off" in the Selection menu, you can display the settings temporarily by selecting "Temporary" in the Setup menu.

135.1 Setup menu

- The following items are never displayed even when "ALL On" is selected.
 - Feed

Setup item	Setting	Description
MediaType	<on></on>	Sets up whether to display the MediaType menu.
	Off	
Effect	<on></on>	Sets up whether to display the Effect menu.
	Off	
Flushing	<on></on>	Sets up whether to display the Flushing menu.
	Off	
Side Margin	<on></on>	Sets up whether to display the Side Margin menu.
	Off	
Media Initial	<on></on>	Sets up whether to display the Media Initial menu.
	Off	
Media Width	<on></on>	Sets up whether to display the Media Width menu.
	Off	
Take-up	On	Sets up whether to display the Winding unit menu.
	<off></off>	
Feed	<off></off>	The feed unit menu is not displayed in this printer.
Origin	<on></on>	Sets up whether to display the MediaType menu.
	Off	
Prev. Stick	<on></on>	Sets up whether to display the Prev. Stick menu.
	Off	
HeadFan	<on></on>	Sets up whether to display the Head fan menu.
	Off	
CR Movement	<on></on>	Sets up whether to display the CR Movement menu.
	Off	

Setup item	Setting	Description
OverwriteCnt	<on></on>	Sets up whether to display the Overwrite Cnt menu.
	Off	
Overwrite Wait	<on></on>	Sets up whether to display the Overwrite Wait menu.
	Off	
Slant Check	<on></on>	Sets up whether to display the Slant Check menu.
	Off	
Auto Cleaning	<on></on>	Sets up whether to display the Auto Cleaning menu.
	Off	
Ink Status	<on></on>	Sets up whether to display the Ink Status menu.
	Off	
Roll Length	<on></on>	Sets up whether to display the Roll Length menu.
	Off	
Head Wash	<on></on>	Sets up whether to display the Head Wash menu.
	Off	
CR Maint.	<on></on>	Sets up whether to display the CR Maintenance menu.
	Off	
Initialization	<on></on>	Sets up whether to display the Initialization menu.
	Off	
Life Times	<on></on>	Sets up whether to display the Life Times menu.
	Off	
IP Address	<on></on>	Sets up whether to display the IP Address menu.
	Off	
Subnet Mask	<on></on>	Sets up whether to display the subnet mask.
	Off	
Gateway	<on></on>	Sets up whether to display the Gateway menu.
	Off	
ALL On		Displays all items in the Setup menu. • Pressing the [Enter] key displays "*" for all items in the Selection menu.
ALL Off		No items in the Setup menu are displayed. • Pressing the [Enter] key deletes "*" for all items in the Selection menu. • Even if you select "ALL Off", you can display the items temporarily by selecting "Temporary" in the Setup menu.
	_	[Cancel] key: saves the setting and shifts to the previous menu. To Panel setup menu

5.6 Version menu

Displays the versions of the firmware.

Setup item	Setting	Description
Ver.M/C	*.**(Main)/*.**(Controller)	Displays the versions of the firmware on the main (M) and controller (C) sides.
	_	[Cancel] key: shifts to the previous menu. [Estimate 5 Panel setup menu]

5.7 Sleep mode menu

Sleep mode settings are configured.

When you activate sleep mode, the printer operates as follows.

- The exhaust fan stops.
- The vacuum fan stops.
- All heaters stop.
- All lamps turn off except for the power lamp.
- Automatic head cleaning is performed after the time set in the Timer Setting Menu has expired. \(\subseteq 5.7.1 \) Timer Setting menu



The cleaning mode reflects the settings in the operation panel.
 6.2.3 Head cleaning

Setup item	Setting	Description
Sleep Mode	Set Timer	Set the auto cleaning interval of this printer for Sleep Mode. 18 5.7.1 Timer Setting menu
	Start	Activate Sleep Mode でである。 Lart menu
	_	• [Cancel] key: shifts to the previous menu.

5.7.1 Timer Setting menu

Set the head cleaning interval of this printer for Sleep Mode.

When more than the set time has passed, the print head is cleaned automatically.

NOTE

- During Sleep Mode, even if the set amount of time has passed, print-head cleaning is not performed under the following circumstances.
 - The front cover is open.
 - The media loading lever is raised.
 - The waste fluid tank is full.
 - The ink pack is empty.
 - The ink pack has been removed.
 - An object other than an appropriate ink pack is inserted in the pack slot, etc.

When the printer returns to a normal state, head cleaning is restarted, and Sleep Mode continues. LE 7.2 Error messages

• If one of the above conditions occurs during head cleaning, cleaning is stopped. When the printer returns to a normal state, head cleaning is restarted.

187.2 Error messages

Setup item	Setting	Description
Set Timer	1 hours	The selected time is passed, the head cleaning is performed.
	2 hours	
	3 hours	
	4 hours	
	5 hours	
	<6 hours>	
	9 hours	
	12 hours	
	18 hours	
	24 hours	
	_	• [Cancel] key: shifts to the previous menu. 飞管 5.7 Sleep mode menu

5.7.2 Sleep Mode Start menu

Activate Sleep Mode

During Sleep Mode, "Press Enter to restart" will be displayed in the operation panel. During Sleep Mode, pressing [Enter] key will return the printer to normal operation.

NOTE

- If you try to switch to Sleep Mode under the following circumstances, "Don't Start Sleep Mode" will be displayed and the printer will not change to Sleep Mode.
 - The front cover is open.
 - The media loading lever is raised.
 - The waste fluid tank is full.
 - The ink pack is empty.
 - The ink pack has been removed.
 - An object other than an appropriate ink pack is inserted in the pack slot, etc.

Activate Sleep Mode again after returning the printer to a normal state.

7.2 Error messages

• During Sleep Mode, pressing [Enter] key under one of the circumstances listed above will not return the printer to normal operation.

Return the printer to a normal state, and press [Enter] key to return the printer to normal operation.
\tilde{27.2} Error messages

Setup item	Setting	Description
Start	Start Sleep Mode?	 [Enter] key: activate Sleep Mode. [Cancel] key: shifts to the previous menu without activating Sleep Mode. \(\sum_{5.7}\) Sleep mode menu
	Restart -> Enter	During Sleep Mode. • [Enter] key: return the printer to normal operation.

6 Maintenance

This chapter describes daily maintenance of the product.

6.1 Replacing consumable components

This section describes when and how to replace the ink packs, roll media and flushing-box sponges.

6.1.1 Replacing ink packs

This sub-section describes when to replace the ink packs.

(1) Replacement time

- a. When "[******] S/C NearEnd" is displayed on the operation panel
 - This message is displayed when there is a small amount of ink remaining in the ink pack.
 - The alarm buzzer sounds.
 To stop the buzzer, press the [Enter] key on the operation panel.
 - Replace it with the new ink pack.
- b. When "[******] S/C InkEnd" is displayed on the operation panel
 - This message is displayed when there is no ink remaining in the ink pack.
 - The alarm buzzer sounds.

 To stop the buzzer, press the [Enter] key on the operation panel.
 - Immediately replace it with the new ink pack.

NOTE

- [******] in the messages of ink pack replacement indicates the color that is almost empty or runs out, using the following characters.
 - K: Black (slot K1)
 - k: Black (slot K2)
 - C: Cyan (slot C1)
 - c: Cyan (slot C2)
 - M: Magenta (slot M1)
 - m: Magenta (slot M2)
 - Y: Yellow (slot Y1)
 - y: Yellow (slot Y2)
 - ALL: All ink
- Do not insert or remove the ink pack except at the time of replacement.
 Inserting or removing the ink pack mixes air into the ink tube, and failures such as nozzle detachment may occur.
- If "Ink End" is displayed, you cannot print until inserting the new ink pack.
- If there is no ink pack for replacement at hand, leave the empty ink pack inserted in the printer. Leaving the printer with the ink pack removed may cause the print head to clog.

(2) Type

Our genuine ink packs that are compatible with the printer are as follows.

Description	Model No.
Ink pack K (Black: 880 ml)	VJ-BIOINK1-BK880
Ink pack C (Cyan: 880 ml)	VJ-BIOINK1-CY880
Ink pack M (Magenta: 880 ml)	VJ-BIOINK1-MA880
Ink pack Y (Yellow: 880 ml)	VJ-BIOINK1-YE880

NOTE

- Use genuine ink packs for replacement.
 - This printer is designed to use genuine ink packs.

If you use an ink pack that is not a product of the original manufacturer,

- Printing might become blurred, or the end of the ink in the pack might not be detected correctly.
- Any problems caused by using an ink pack other than those recommended above will not be covered by the warranty, and repair expenses will be paid by the customer.

(3) Replacing steps

Follow the procedure below to replace the ink packs.



 When handling ink packs, pay attention so that ink does not get into your eyes or stick to your skin.

If ink gets into your eyes or sticks to your skin, immediately wash it off with water. Failing to do so might cause irritation or light inflammation of eyes. In case of any abnormality, consult a physician immediately.

Do not disassemble the ink packs.
 If disassembled, there is a possibility that ink might come into contact with eyes or skin.

NOTE


- Do not give ink packs strong shakes.
 Doing so may cause ink leakage.
- Do not disassemble the ink packs.
 A disassembled ink packs cannot be used.
- When an ink pack is moved from a cold place to warm place, keep the ink pack for three hours or more in the new printing environment before printing.
- Do not refill an ink pack with ink.
 It may result in abnormal printing.
- Insert or remove the ink pack at the time of replacement only.

 Inserting or removing the ink pack except at the time of replacement may result in incorrect printing.
- The procedure for replacing ink pack K (slot K1) is described below.
- 1. Confirm that the printer is turned ON.

NOTE


- Do not replace ink packs when the printer is turned OFF.

 The remaining ink may not be detected correctly, causing abnormal printing.
- 2. Remove the ink S/C card to replace.

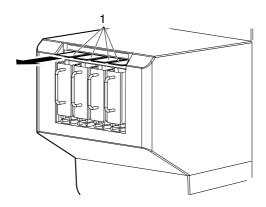

No.	Name
1	S/C card

- 3. Remove the ink pack that you want to replace.
 - a. Pull out the ink pack slot.

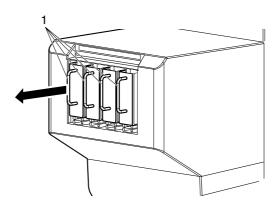


No.	Name
1	Ink pack slot

b. Remove the ink pack that you want to replace from the ink pack slot.



• Used ink pack should be put in a vinyl bag, etc, and dispose of it in compliance with local ordinance and instructions of local authorities.

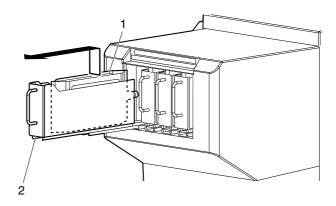


No.	Name
1	Ink pack
2	Ink pack slot

4. Remove the new ink S/C card and ink pack from their bags.




- Open the bag just before attaching the ink pack to the pack slot.
 Leaving the ink pack with the bag open for a long time may result in abnormal printing.
- Use the ink pack within 1 years from the date printed on the package. Using an ink pack after this period may affect print quality.
- Replace the ink pack three months after installing it in the printer.
- 5. Install the new ink S/C card and ink pack.
 - a. Insert the ink S/C card into the S/C card slot.
 - Ink S/C cards are specified depending on the colors of the ink pack. Match the mark on each slot with the color of the ink pack.
 - Insert the S/C card all the way to the end of the slot.

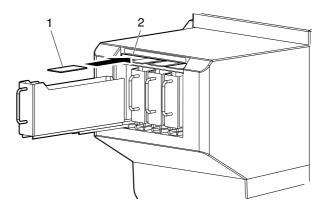


No.	Name
1	Ink S/C card
2	S/C card slot

b. Shake the new ink pack two to three times gently before inserting it into the ink pack slot.

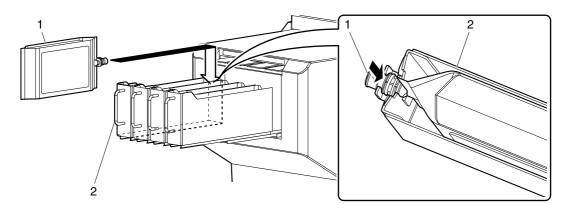

No.	Name
1	Ink pack
2	Ink pack slot

- c. Re-insert the ink pack slot.
 - Insert the ink pack slot all the way to the end of the slot.

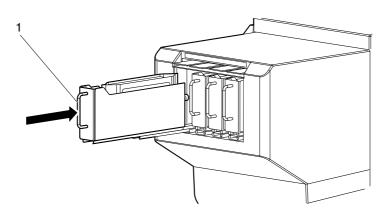

No.	Name
1	Ink pack slot

6. Confirm that the operation panel returns to Normal.

NOTE

• If the ink pack is replaced during printing, printing resumes.

• Ink pack replacement is complete.

6.1.2 Replacing roll media

This sub-section describes when and how to replace roll media.

(1) Replacement time

Replace roll media in the following situations.

- a. When the roll media loaded in the printer runs out
 - "End Of Roll" is displayed on the operation panel.
 - If media runs out during printing, the printer stops printing.
- b. When you want to change the media type to use

(2) Type



• For types and details of roll media, refer to "8.3 Options/Supply list".


(3) Replacing steps

Follow the procedure below to replace roll media.

1. If the printer is turned ON, confirm that operation such as printing is not in progress.




- Be careful not to trap your fingers when opening and closing the media cover.
- 2. Raise the media loading lever.

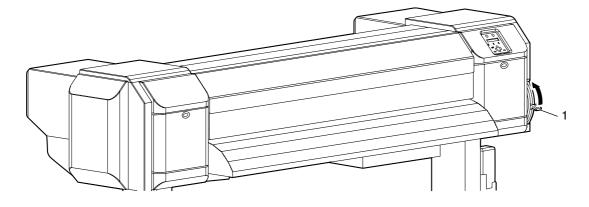


No.	Name
1	Media loading lever

3. Turn the flanges of the roll media holders and wind roll media.

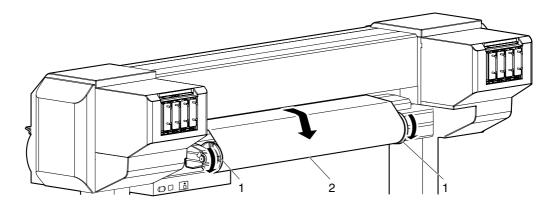


No.	Name
1	Roll media holders
2	Roll media

4. Loosen the lever of the right roll media holder and remove the media.

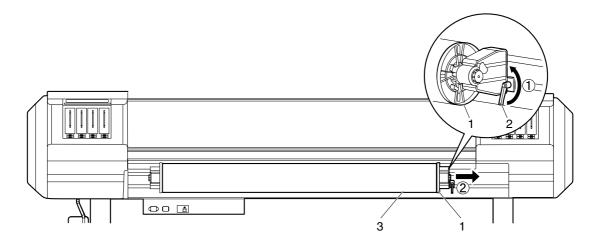

No.	Name
1	Roll media holder (Right)
2	Fixing lever
3	Roll media

5. Take the same procedure as in step 4, remove the roll media from the left roll media holder.

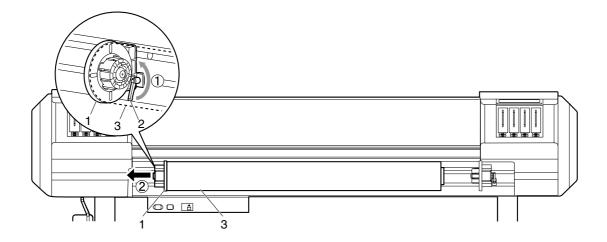

No.	Name
1	Roll media holder (Left)
2	Fixing lever
3	Roll media

6. To load another roll media, refer to the following.



- For loading roll media, refer to "3.4 Setting media".
- For storing roll media not in use, refer to "4.2.3 Precaution on storing media".
- Roll media replacement is complete.

6.1.3 Replacing the flushing-box sponges

This section explains how to replace the flushing-box sponges.




• Make sure to install the flushing-box sponges in the printer.

The flushing-box sponges are an essential part to make printing consistent.

(1) Replacement time

Replace the flushing-box sponges in the following situations.

• When ink clumps have accumulated on the flushing-box sponges beyond the flushing-box frame

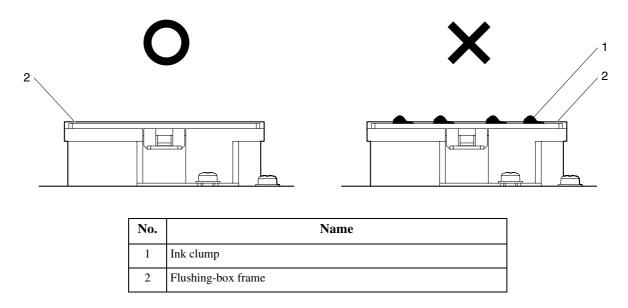

(2) Type




• For types and details of the flushing-box sponge, refer to "8.3 Options/Supply list".

(3) Replacing steps


Follow the steps below to replace the flushing-box sponges.

- 1. If the printer is turned ON, make sure the following.
 - Printing or other operations are not in progress.
 - The operation panel display is Normal.
- 2. Display the CR Maintenance menu on the operation panel.
 - a. Press the [Menu] key on the operation panel.

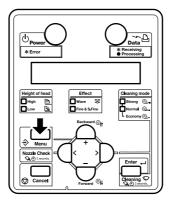


• "Menu 1: Setup>" is displayed on the operation panel.


- The operation panel shifts to the Setup menu display.
- b. Press the [>] key on the operation panel.

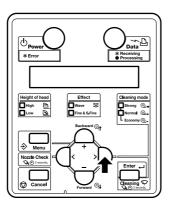


- "Set1: MediaType" is displayed on the operation panel.
- c. Press the [+] key or [-] key to select "Set20: CR Maintenance".

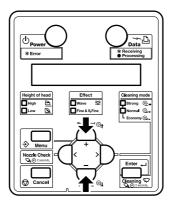


d. Press the [Enter] key on the operation panel.

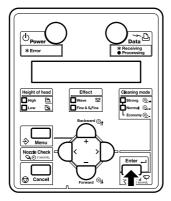


- "CR Mainte.: Start" is displayed on the operation panel.
- The display enters the CR Maintenance menu. LF 5.1.19 CR Maintenance menu
- 3. Press the [Enter] key on the operation panel.

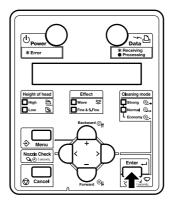

- Maintenance starts.
- The print head moves to the left.
- "CR Maintenance: End" is displayed on the operation panel.
- 4. Open the front cover.

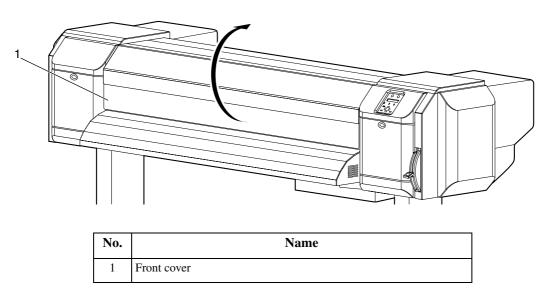

5. Lift the flushing-box sponge hook and release the hook. Then, remove the flushing-box sponge holder.

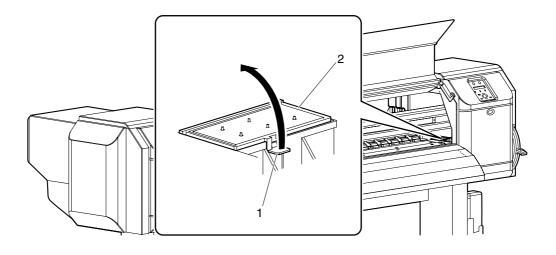


No.	Name
1	Flushing-box sponge hook
2	Flushing-box sponge holder




- Do not drop waste fluid when replacing the flushing-box sponges.

 If waste fluid comes into contact with the grid roller, the surface of the grid roller will be damaged, and the media feed function may be affected.
- 6. Install the new flushing-box sponge to each flushing box.

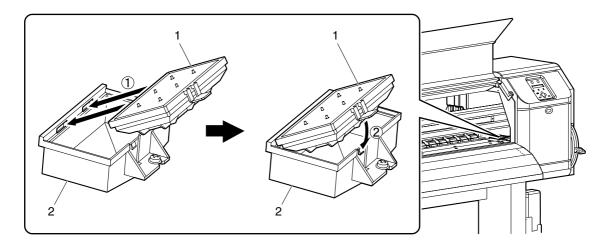


No.	Name
1	Flushing boxes
2	Flushing-box sponges

7. Close the front cover.

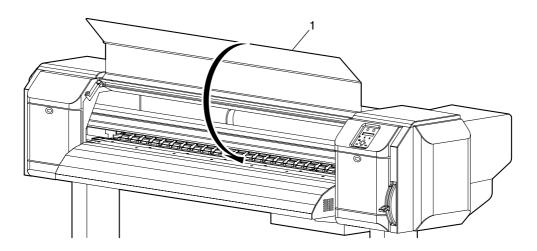


No.	Name
1	Front cover

8. Press the [Enter] key on the operation panel.

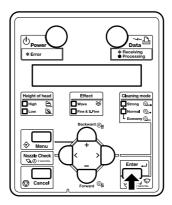

- The print head returns to its original position.
- "CR Mainte.: Start" is displayed on the operation panel.
- 9. Press the [Cancel] key on the operation panel several times.

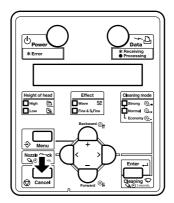


- The printer enters Normal.
- Flushing-box sponge replacement is complete.

6.2 Cleaning the printer

Periodic (every month) cleaning is necessary to use the printer in good condition.



- Do not insert or drop metal or flammable objects into the printer through openings such as a vent.
 - It could lead to an electric shock or fire.
- If foreign substances or liquids such as water entered the printer, do not use the printer as it is.
 - It could lead to an electric shock or fire.
 - Immediately turn OFF the power switch, disconnect the power plug from the electric socket, and contact your local MUTOH dealer.

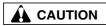


- When cleaning the printer, be sure to turn OFF the power and disconnect the power plug.
- Do not use volatile solvents such as thinner, benzene, or alcohol. These solvents could cause damage to the paint.
- Be careful that no moisture enters the printer.
 There is a possibility that the electric circuit inside the printer is short circuited.
- Do not open covers attached using screws under any circumstances.
 This may cause an electric shock or a malfunction.

This section describes how to clean each part of the printer.

6.2.1 Cleaning the outer case

This sub-section describes how to clean the outer case.

Wipe out dust and dirt attached to the outer case by using a soft cloth.

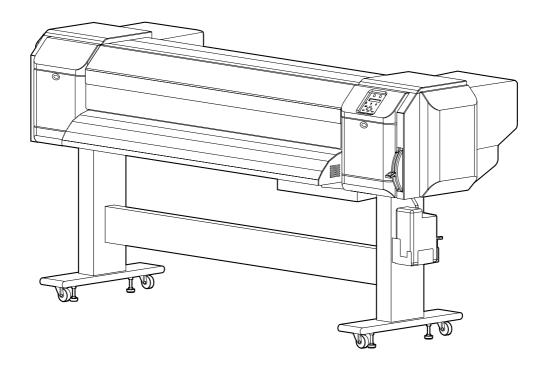


6.2.2 Cleaning the inside of the printer

This sub-section describes how to clean the inside of the printer.

Follow the procedure below.


1. Open the front cover.

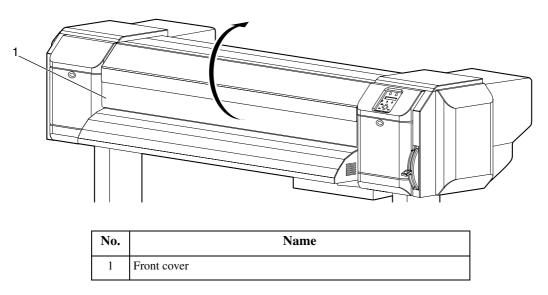


2. Remove paper powder and dust attached to the pressurizing rollers using a soft brush.

NOTE

• Do not blow paper powder inside the printer using tools such as an air duster. It may cause an abnormal noise from the inside of the printer.

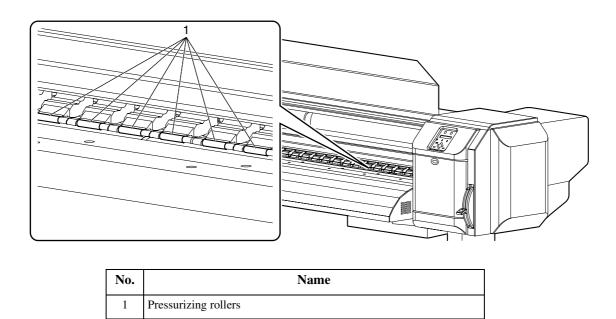

3. Apply a damp and tightly squeezed soft cloth to wipe out paper powder and ink attached to the platen and media guide.

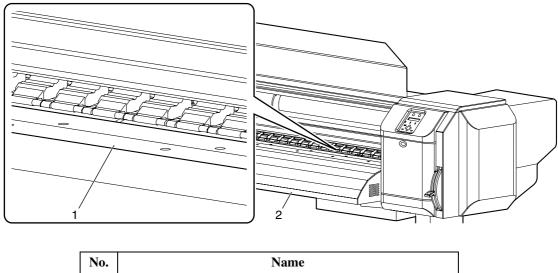


No. Name

1 Platen

2 Media guide

4. Apply a damp and tightly squeezed soft cloth to wipe off the dirt of the unpainted (silver color) area in the center of the grid roller.

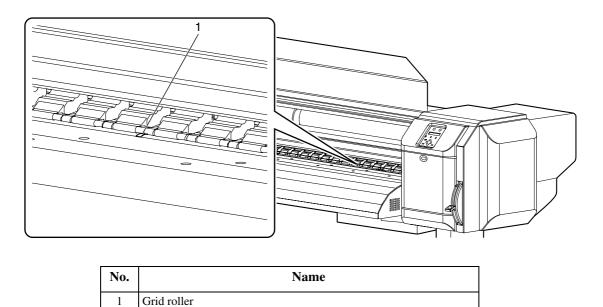

·


6.2.3 Head cleaning

If printed data is blurred or lacks part of it, clean the print head surface and nozzle (Head cleaning). Follow the procedure below to perform Head cleaning.




- When not using the printer for a long period (one week or more), perform Head cleaning once a week.
 - If not performing Head cleaning, the print head is clogged. Doing so will preserve print quality.
- Remove media when cleaning.

 Cleaning with media loaded may lead to contact between the print head and media.
- 1. Confirm that the operation panel is Normal.
- 2. Check that the media loading lever is lowered.
- 3. Press the [>] key on the operation panel to select the cleaning mode.

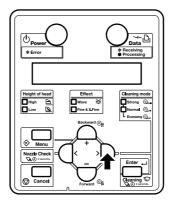

4. Press the [Cleaning] key on the operation panel for at least 2 seconds.

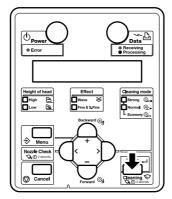

- Start Head cleaning.
- "Cleaning **%" is displayed on the operation panel.
- After Head cleaning is complete, the operation panel shifts to Normal.



- If blurs or lacking parts in printed media do not disappear with one time of Head cleaning, perform Strong cleaning.
- If blurs or lacking parts in printed media do not disappear with several times of Head cleaning, refer to "7 Troubleshooting", and take appropriate measures.

6.2.4 Cleaning the cleaning wiper unit and around the print head

This section describes how to clean the cleaning wiper unit, surrounding area for the cleaning wiper unit, and around the print head.

(1) Cleaning time

Once a day, after operating for the day.

(2) Cleaning method

Follow the procedure below to clean the cleaning wiper unit, surrounding area for the cleaning wiper unit, and around the print head.

- Use the following parts below to clean the cleaning wiper unit, surrounding area for the cleaning wiper unit, and around the print head.
 - · Cleaning fluid
 - Cleaning stick
 - Plastic cup
 - Dropper

图 8.3 Options/Supply list

1. Turn OFF the power of the printer.

13.2.2 Turning the power OFF

- "CR Mainte.: Start" is displayed on the operation panel.
- 2. Press the [Enter] key on the operation panel.
 - Maintenance starts.
 - The print head moves to the left.
 - The cleaning wiper raises.
 - "CR Maintenance: End" is displayed on the operation panel.
- 3. Clean the cleaning wiper unit.

136.2.4.1 Cleaning the cleaning wiper unit

4. Clean around the print head.

126.2.4.2 Cleaning around the print head




- · Press the [Cancel] key if cleaning the cleaning wiper unit and around the print head is not performed.
- 5. After cleaning is completed, press the [Enter] key on the operation panel.
 - The cleaning wiper returns to its original position.
 - The print head returns to its original position.
 - The printer starts the procedure to turn the power OFF.
 - "Power Off" is displayed on the operation panel.
 - All the lamps on the operation panel and the LCD monitor are turned OFF.
 - The printer automatically turns the power OFF.

6.2.4.1 Cleaning the cleaning wiper unit

This sub-section describes how to clean the cleaning wiper and surrounding area.


Follow the procedure below to clean the cleaning wiper and the surrounding area.

1. Open the maintenance cover on the right of the printer.

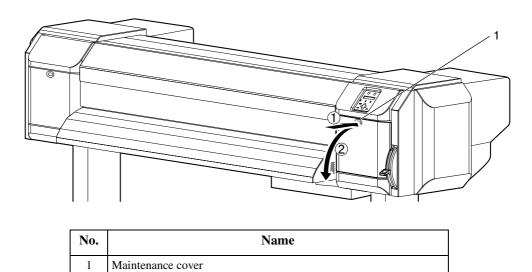




- · When cleaning the cleaning wiper
 - Do not touch the cleaning wiper and head cap unit.
 Head cleaning may not be performed correctly because of oil from your hands.
 - Make sure to use a cleaning stick, and dip it in the specialized cleaning fluid (VJ-BIOINK1-CL), and then clean the wiper.
 Wipe it a fluid other than the specialized cleaning fluid can cause the print head to clog.
 - Cleaning sticks can be used for about 1 week.
 After 1 week, or when you cannot remove ink clumps, replace the cleaning stick.
- 2. Dip the cleaning stick in the cleaning fluid, and remove the ink and dust on the cleaning wiper.
 - a. Cleaning wiper left side:Remove the ink and dust from the front and back.

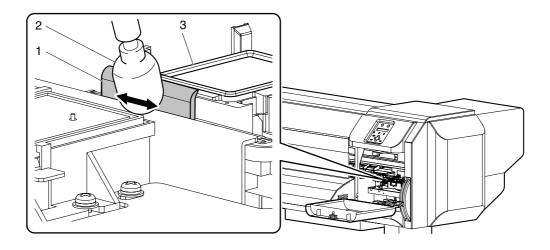

No.	Name
1	Cleaning wiper left side
2	Cleaning stick
3	Head cap unit

b. Cleaning wiper right side:


Remove the ink and dust from the front and back.

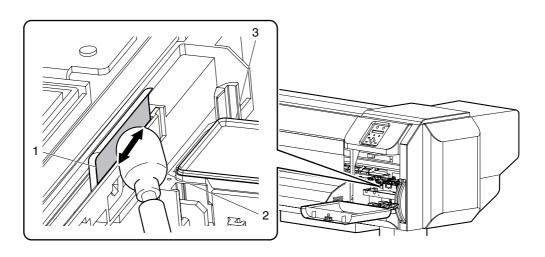

No.	Name
1	Cleaning wiper right side
2	Cleaning stick
3	Head cap unit

c. Cleaning wiper unit right side surface:


Clean the right side surface of the cleaning wiper unit.

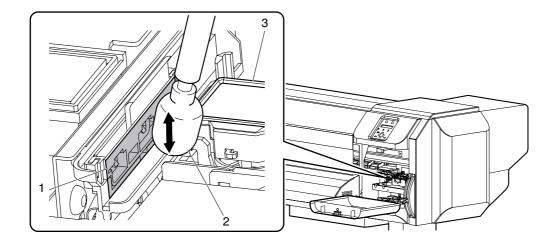

No.	Name
1	Cleaning wiper right side surface
2	Cleaning stick
3	Head cap unit


d. Cleaning wiper unit lower groove:

Clean the cleaning wiper unit's lower side groove starting at the back and moving towards the front.

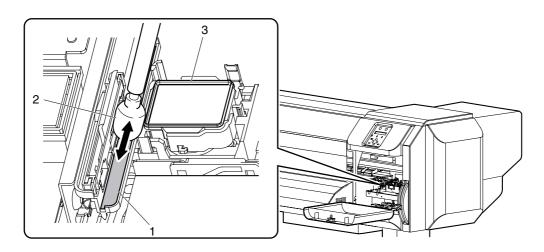


No.	Name
1	Cleaning wiper lower groove
2	Cleaning stick
3	Head cap unit

3. Using the dropper included with the printer, completely soak each head cap units with cleaning fluid (1 ml to 2 ml).

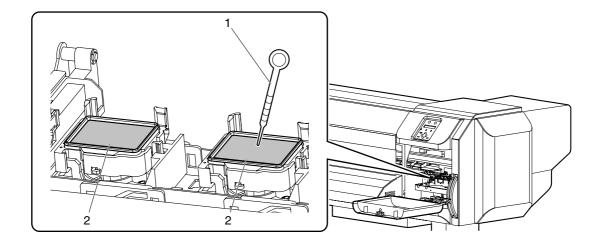

No.	Name
1	Dropper
2	Head cap unit

- 4. Close the right maintenance cover.
 - Close the cover firmly until it is locked.

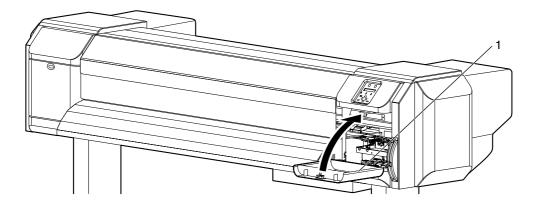

No.	Name
1	Maintenance cover

- Cleaning of the cleaning wiper and surrounding area is complete.

6.2.4.2 Cleaning around the print head

This section describes how to clean around the print head.

Follow the procedure below to clean around the print head.


- Before starting to clean around the print head, read and understand this procedure, then clean promptly and accurately.
- When cleaning around the print head, the print head cap must be removed and cleaning must be complete before the head dries.

The recommended time for cleaning is about 15 minutes.

If cleaning exceeds 15 minutes, discontinue it by following steps 4 and 5. Perform Head cleaning, and then start cleaning around the print head again.


图 6.2.3 Head cleaning

1. Open the left maintenance cover.

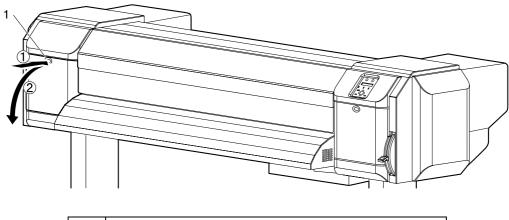


No.	Name
1	Maintenance cover

2. Confirm, using a light such as a penlight, that there are no foreign objects, such as dust or ink attached to the following parts:

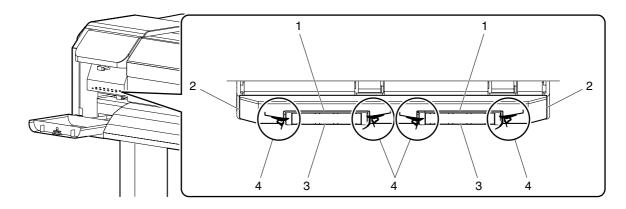


No.	Name
1	Around the print head
2	Head guide area
3	Nozzle

No.	Name
4	Dust, ink clump

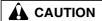


- · When cleaning around the print head
 - Do not touch the nozzle of the print head. Doing so may damage the print head.
 - Do not touch the head of the cleaning stick.
 Oil on your hands may attach to the cleaning stick, causing damage to the print head.
 - Make sure to use a cleaning stick, and dip it in the specialized cleaning fluid (VJ-BIOINK1-CL), and then clean around the print head.
 Wipe it a fluid other than the specialized cleaning fluid can cause the print head to clog.
 - Cleaning sticks can be used for about 1 week.
 After 1 week, or when you cannot remove ink clumps, replace the cleaning stick.
- 3. If foreign objects, such as dust or ink are attached to the print head, dip the cleaning stick in cleaning fluid and remove them.

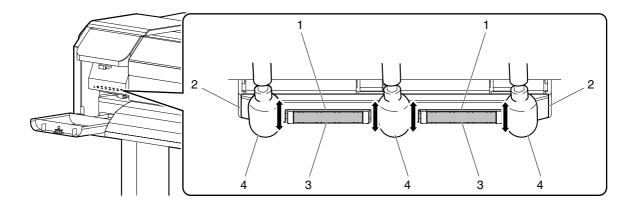


No.	Name
1	Around the print head
2	Head guide area
3	Nozzle
4	Cleaning stick

- 4. Close the left maintenance cover.
 - Close the cover firmly until it is locked.

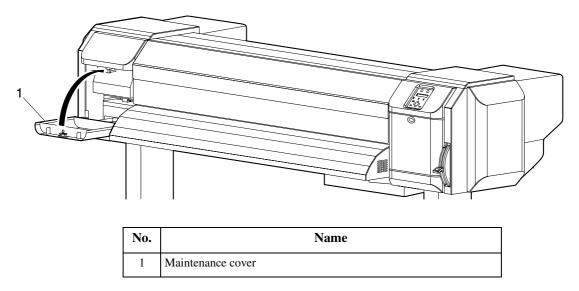

5. Press the [Enter] key on the operation panel.

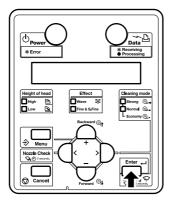

- The cleaning wiper returns to its original position.
- The print head returns to its original position.
- Cleaning around the print head is complete.

6.3 Disposal of waste fluids

The schedule and method for disposal of waste fluid is described below.

(1) Disposal period

Dispose of waste fluids in the following cases:

- a. When the waste fluid tank is more than half full.
- b. When "Waste Ink Tank Full" is displayed on the operation panel.

(2) Disposal method


Follow the procedure below to dispose of waste fluid.



- The waste fluid from the printer is industrial waste.
 Proper waste fluid disposal according to industrial waste disposal laws and ordinances of your local government is required.
 Consign disposal of waste fluids to a specialized processor.
- 1. Ready an empty container such as a supply waste fluid bottle, to contain the waste fluid.
- 2. Lay a protective material on the floor under the waste fluid tank.
- 3. Open the waste fluid valve, and transfer the waste fluid to the container.


NOTE

• When transferring the waste fluid to the empty container, the waste fluid may splash. When transferring the waste fluid to the empty container, put the container close the waste fluid valve.

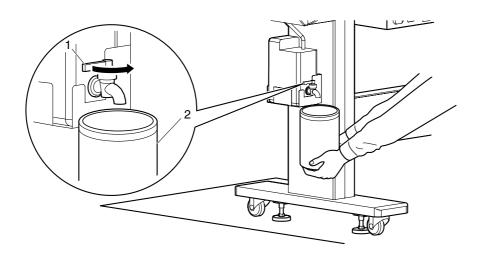

No.	Name
1	Waste fluid valve
2	Empty container

4. After transferring the waste fluid to the empty container, close the waste fluid valve securely.

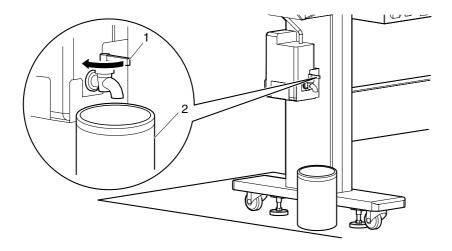

No.	Name
1	Waste fluid valve

- 5. Wipe the opening of the waste fluid valve with a cloth, etc.
- 6. Dispose of the waste fluid as an industrial waste product.
 - Disposal of waste fluids is completed.

6.4 Moving or transporting the printer

This section describes how to move or transport the printer.

6.4.1 Moving the printer

This sub-section describes how to move the printer.



- Move the printer maintaining a horizontal position.
- Do not slant the printer, prop it against a wall or turn it upside down.
 There is a possibility that ink inside the printer may leak.
 Moreover, normal operation after shifting (to these positions) cannot be guaranteed.

(1) Preparation before moving


When using the dedicated stands, follow the procedure below to move the printer.

- 1. Make sure that the printer is turned OFF. 12 3.2.2 Turning the power OFF
- 2. Dispose of waste fluid.

 18 6.3 Disposal of waste fluids
- 3. Remove all the cables, such as the power cable.
- 4. Loosen the four adjusters of the stand as shown in the next illustration.
- 5. Move the printer.



• The casters supplied with the dedicated stand are manufactured for little movement in flat indoor areas, not for transporting equipment.

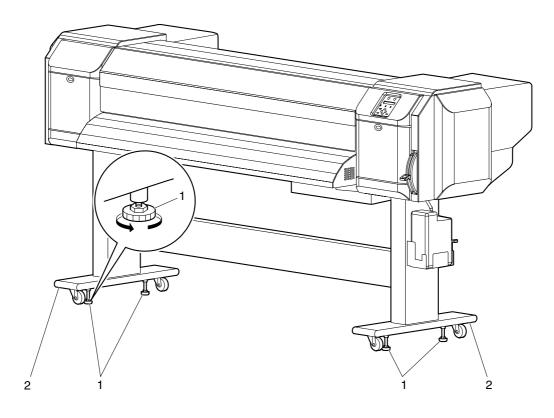

No.	Name
1	Adjusters
2	Stands

(2) Reinstalling

After moving the printer, follow the procedure below to set it ready for use.

- 1. Select a suitable place for installation.
- 2. Move and install the printer to the location.
- 3. Attach cables, such as the power cable.
 - 13.1 Power cable connection
 - 13.7 Connecting the printer to PC
- 4. Perform Nozzle check, and then confirm that there is no clogging in the print head. LP 3.5.1 Nozzle check
- 5. Perform Alignment. \$\mathbb{Z}\mathbb{F} 3.6 Adjust print

6.4.2 Transporting the printer

When transporting the printer, it is necessary to pack in the same condition as purchased using protective and packing materials to protect the printer from vibration and shocks.



• When transporting the printer, consult the MUTOH product dealer at your point of purchase.

7 Troubleshooting

This chapter describes possible troubles during the use of this product and countermeasures.

If an error not included in any items of this section occurs, contact your local MUTOH dealer.



• If you want to receive product warranty, prepare the warranty certificate.

If the warranty certificate is not presented, the repair will not be covered by the warranty even if within the warranty period.

If you have signed a maintenance service contract, prepare that or a similar document.

7.1 Malfunctions and failures

This section describes undisplayed malfunctions and failures of the printer, possible causes and countermeasures.

7.1.1 Problems in installation and introduction

(1) Cannot perform ink replenishment

No.	Possible cause	Remedy	Reference
1	Is the front cover open or media loading lever raised?	Close the front cover, or lower the media loading lever.	工管 3.4 Setting media
2	Is the maintenance cover open?	Close the maintenance cover.	the cleaning wiper unit 上音 6.2.4.2 Cleaning around the print head
3	Are all S/C cards and ink packs fully inserted?	Fully insert all S/C cards and ink packs.	【夢 6.1.1 Replacing ink packs

(2) Ink does not come out after ink replenishment

No.	Possible cause	Remedy	Reference
1	Is the ink pack cold and frozen?	Leave the ink pack at room temperature for at least 3 hours, and perform cleaning several times.	E 6.2.3 Head cleaning
2	Is the power turned OFF during ink replenishment?	Turn the power ON again and continue ink replenishment.	13.3 Installing ink packs
3	Occasionally, normal printing cannot be performed after ink replenishment.	Perform little charge.	飞 6.2.3 Head cleaning

7.1.2 Cannot print at all

(1) Does not work at all after power activation

No.	Possible cause	Remedy	Reference
1	Is the power cable connected to the plug?	Connect the power cable.	で 3.1 Power cable connection
2	Does the AC power supply provide the specified voltage?	Connect the cable to another outlet.	で 3.1 Power cable connection
3	Is the front cover open or media loading lever raised?	Close the front cover. Lower the media loading lever.	工管 3.4 Setting media

No.	Possible cause	Remedy	Reference
4	Is the maintenance cover open?		比例 6.2.4.1 Cleaning the cleaning wiper unit 上級 6.2.4.2 Cleaning around the print head

(2) Does not work after loading the media

No.	Possible cause	Remedy	Reference
1	Is the front cover open or media loading lever raised?	Close the front cover. Lower the media loading lever.	工管 3.4 Setting media
2	Is the maintenance cover open?	Close the maintenance cover.	the cleaning wiper unit 13 6.2.4.1 Cleaning wiper unit 13 6.2.4.2 Cleaning around the print head
3	Is the media loaded at an angle?	Load the media straight.	工管 3.4 Setting media
4	Is the S/C card and ink pack inserted?	Insert an S/C card and ink pack.	工管 3.3 Installing ink packs
5	Are you using the recommended media?	Use the recommended media.	12 4.2.1 Media type
6	Is the printer being used in an environment other than the one specified, such as in direct sunlight?	Only use the printer in an environment that is specified for use.	Installation manual

(3) When data is sent from the computer, an error occurs at the printer and nothing is printed

No.	Possible cause	Remedy	Reference
1	Is the type of printer selected correctly at the computer?	Check that the printer type settings on the computer side and printer side are the same.	文章 3.7 Connecting the printer to PC
2	Are the interface requirements and command mode the same on the computer side and printer side?		

(4) Cannot use the computer online using LAN

No.	Possible cause	Remedy	Reference
1	Is the network interface cable connected correctly?	Confirm the types of the cross and straight cables, and connect the network interface cable correctly.	13.7.3 Connecting a network interface cable
2	Are the network settings configured correctly?	Configure the network settings correctly.	Address menu to 5.1.24 Gateway menu

No.	Possible cause	Remedy	Reference
3	Match the printer's network settings with the computer side environment.	Match this product's network settings with the computer side environment.	に置3.7.1 System requirements
4	Does the Data lamp on the operation panel turn on after sending printing data from the computer?	If the Data lamp does not turn on, contact the computer manufacturer.	

7.1.3 Media-related troubleshooting

(1) The media slips or is torn during initialization



• If the media is jammed or torn, remove it according to "7.3 The media is jammed".

No.	Possible cause	Remedy	Reference
1	Are you using the recommended media?	Use the recommended media.	12 4.2.1 Media type
2	Is the loading position of the media correct?	Set the media correctly.	义 3.4.2 Setting roll media
3	Is the roll media set correctly?	Set the roll media correctly.	文章 3.4.1 Loading roll media
4	Are there any foreign materials such as paper attached to the pressurizing roller?	Clean the pressurizing roller.	18 6.2.2 Cleaning the inside of the printer
5	Is the printer being used in an environment other than the one specified, such as in direct sunlight?	Only use the printer in an environment that is specified for use.	IF Installation manual
6	Are you using folded, torn or rolled media?	Replace the media.	文章 4.2.2 Cautions on handling media
7	Does the media bend?	Use the recommended media. When using media other than the dedicated one, set the Vacuum Fan menu.	工产4.2.1 Media type 工产5.1.1.1.7 Vacuum Fan menu

(2) The media is crumpled during initialization

NOTE

• If the media is jammed or torn, remove it according to "7.3 The media is jammed".

No.	Possible cause	Remedy	Reference
1	Are you using the recommended media?	Use the recommended media.	12 4.2.1 Media type

No.	Possible cause	Remedy	Reference
2	Is the loading position of the media correct?	Set the media correctly.	工管 3.4.2 Setting roll media
3	Is the media loaded at an angle?	Set the media straight.	【管 3.4.2 Setting roll media
4	Are there any foreign materials such as paper attached to the pressurizing roller?	Clean the pressurizing roller.	下 6.2.2 Cleaning the inside of the printer
5	Is the printer used in an environment other than the one specified, such as near an air conditioner?	Only use the printer in an environment that is specified for use.	图 Installation manual
6	Are you using folded, torn or rolled media?	Replace the media.	工資 4.2.2 Cautions on handling media

(3) The wrong media size is set during initialization

No.	Possible cause	Remedy	Reference
1	Are you using the recommended media?	Use the recommended media.	4.2.1 Media type
2	Is the media loaded at an angle?	Set the media straight.	工管 3.4.2 Setting roll media
3	When the media is set, does it curl upward?	Straighten the media or set a new media.	文章 3.4.2 Setting roll media
4	Is the printer being used in an environment other than the one specified, such as in direct sunlight?	Only use the printer in an environment that is specified for use.	图 3.4.1 Loading roll media
5	Are you using media that has been printed on already?	Use a new media.	算4.2.1 Media type

(4) Media jams frequently occur



• If media other than the recommended one is used, correct media feeding cannot be assured.

No.	Possible cause	Remedy	Reference
1	Are you using the recommended media?	Use the recommended media.	4.2.1 Media type
2	Is the media used in an environment other than the one specified?	Use the media in a dedicated environment.	工管 4.2.2 Cautions on handling media
3	Are you using the old media?	Replace it with new media.	6.1.2 Replacing
4	Are you using the folded or wrinkled media?		roll media
5	Does the media bend?	Use the recommended media. When using media other than the dedicated one, set the Vacuum Fan menu.	工产4.2.1 Media type 工产5.1.1.1.7 Vacuum Fan menu

(5) The media veers during printing

No.	Possible cause	Remedy	Reference
1	Are you using the recommended media?	Use the recommended media.	图 4.2.1 Media type
2	Is the loading position of the media correct?	Set the media correctly.	区置 3.4.2 Setting roll media
3	Is the roll media set correctly?	Set the roll media correctly.	又是 3.4.1 Loading roll media

7.1.4 Printing-related troubleshooting

(1) Printing is partially stained or incomplete



• Proper print quality may not be obtained with the media other than the recommended one.

No.	Possible cause	Remedy	Reference
1	Does the media include moisture?	Replace it with new media.	6.1.2 Replacing
2	Are you using the folded or wrinkled media?		roll media
3	Does the media bend?	3371 ' 1' 41 41 41 11' 4 1	译 4.2.1 Media type 译 5.1.1.1.7 Vacuum Fan menu

(2) The printing position is incorrect (some parts of the media cannot be printed on)

No.	Possible cause	Remedy	Reference
1	Is the loading position of the media correct?	Set the media correctly.	工管 3.4.2 Setting roll media
2	Did you set up the origin and print position?	Cancel or reset the settings of the origin and print position.	工管 5 Panel setup menu

(3) Printing is blurred

No.	Possible cause	Remedy	Reference
1	Are you using the recommended media?	Use the recommended media.	12 4.2.1 Media type
2	Are you using the thick or thin media?	Use the recommended media.	4.2.1 Media type
3	Is the media printed on the printing surface?	Confirm the printing surface of the media and set it correctly.	工艺 3.4 Setting media
4	Did you perform Alignment?	Perform Alignment.	13.6 Adjust print

No.	Possible cause	Remedy	Reference
5	Did you perform Media feed compensation?	Perform Media feed compensation.	12 4.2.6 Media feed compensation
6	Is each heater set to the appropriate temperature?	Set it to the appropriate temperature.	医 5.1.1.1.3 Pre Heater menu to 5.1.1.1.5 Drier menu
7	Is the head height set to High?	Return the head height to "Normal (Low)".	12 4.2.5 Head height adjustment

(4) White or black lines appear on printed media

No.	Possible cause	Remedy	Reference
1	Are you using the recommended media?	Use the recommended media.	4.2.1 Media type
2	Is the roll media set correctly?	Set the roll media correctly.	了3.4.1 Loading roll media
3	Is the nozzle in good condition?	Perform Head cleaning.	足 6.2.3 Head cleaning
4	Did you perform Alignment?	Perform Alignment.	3.6 Adjust print
5	Did you perform Media feed compensation?	Perform Media feed compensation.	工管 4.2.6 Media feed compensation
6	Is each heater set to the appropriate temperature?	Set it to the appropriate temperature.	LF 5.1.1.1.3 Pre Heater menu to 5.1.1.1.5 Drier menu
7	Is the head height set to High?	Return the head height to "Normal (Low)".	12 4.2.5 Head height adjustment

(5) Printing lines are not straight

No.	Possible cause	Remedy	Reference
1	Is the ink pack within the validity period?	Use a new ink pack.	上記 6.1.1 Replacing ink packs
2	Are you using the recommended media?	Use the recommended media.	4.2.1 Media type
3	Did you perform Alignment?	Perform Alignment.	图 3.6 Adjust print
4	Did you perform Media feed compensation?	Perform Media feed compensation.	又至4.2.6 Media feed compensation

(6) Printing lines are duplicated or patchy

No.	Possible cause	Remedy	Reference
1	Is the nozzle in good condition?	Perform Head cleaning.	飞音 6.2.3 Head cleaning
2	Is the head height set to High?	Return the head height to "Normal (Low)".	上置 4.2.5 Head height adjustment

7.2 Error messages

This section describes messages displayed during normal printer operation or when errors occur, and solutions to the messages.

7.2.1 Status messages

This section describes messages displayed during printer normal operation.

When the product is operating correctly, each operation status is displayed on the operation panel as below.

No.	Display	Description	Reference
1	Ready to Print	Standby (Media is loaded).	_
2	Media End	Standby (Media is not loaded).	工管 3.4 Setting media
3	Receiving	Receiving data.	_
4	Converting	Analyzing data.	_
5	Printing	Under printing.	_
6	Warming Up	Warming up the heater.	_
7	Cleaning **%	Cleaning the head. Please wait a while.	区 6.2.3 Head cleaning
8	Start Ink Charge – >E	Ink filling starts. Press the [Enter] key.	13.3 Installing ink packs
9	Insert CleaningCart.	Washing the head. Install the cleaning fluid S/C cards and cleaning fluid packs.	に置 3.3 Installing ink packs に置 5.1.18 Head Wash menu
10	During Washing	Washing the print head by Head washing. Please wait a while.	工資 3.3 Installing ink packs 工資 5.1.18 Head Wash menu
11	Remove Cartridges	Washing the head. Remove the cleaning fluid S/C cards and cleaning fluid packs.	【記 3.3 Installing ink packs 【記 5.1.18 Head Wash menu
12	Wash retry? No	Head washing is complete. Press the [Enter] key.	了3.3 Installing ink packs
13	Insert InkCartridges	Filling the ink. Install the ink S/C cards and ink packs.	了3.3 Installing ink packs
14	Ink Refill **%	Filling the ink. Please wait a while.	13 3.3 Installing ink packs
15	Moving Origin Pos.	The print head is moving to the original printing position in the Origin setup menu. Please wait a while.	飞5.1.8 Origin menu

No.	Display	Description	Reference
16	Confirm Position – >E	The print head is moving to the original printing position in the Origin setup menu. Press the [Enter] key.	下5.1.8 Origin menu
17	** Initialing **	Initializing the setting in the Initialization menu. Please wait a while.	区 5.1.20 Initialization menu
18	** Press 2sec. **	The [Cleaning] key or the [Nozzle Check] key is pressed for less than 2 seconds. Press the key for more than 2 seconds again.	TF 2.2.3 Operation panel
19	Media: Type ** OK?	Initializing the media. Please wait a while.	3.4.3 Setting
20	Media Initial	(** represents the setup media type.)	media type
21	Cover Open	The front cover is open.	工艺 3.4 Setting
22	Mainte.CoverL Open	The left maintenance cover is open.	media
23	Mainte.CoverR Open	The right maintenance cover is open.	the cleaning wiper unit 18 6.2.4.1 Cleaning wiper unit 18 6.2.4.2 Cleaning around the print head
24	Lever Up	The media loading lever is raised. Set the media.	工置 3.4 Setting media
25	Start Sleep Mode?	Waiting to activate Sleep Mode. Press the [Enter] key to activate Sleep Mode.	飞5.7 Sleep mode menu
26	Restart -> Enter	During Sleep Mode. Press the [Enter] key to return the printer to Normal operation.	飞5.7 Sleep mode menu



• The value of the Authorization Code may be displayed for the display of the option function. For details, contact your local MUTOH dealer.

7.2.2 Error message display and remedies

This section describes error messages and remedies.

Error messages are displayed when certain failures occur during printer operation.

If an error that can be displayed occurs, the printer may display the following error messages on the operation panel and stop operation.

If the printer stops operating, solve the error so that the printer restarts.

N	No.	Display	Description	Remedy	Reference
	1		Failed in identifying the media. (Stops operation)	Reload the media.	第3.4 Setting media

No.	Display Description		Remedy	Reference
2	Media Slant	The media was not fed straight. (Stops operation)	Reload the media.	工 3.4 Setting media
3	End Of Roll	The roll media has run out. (Stops operation)	Load a new roll media.	文章 6.1.2 Replacing roll media
4	[******] S/C NearEnd	Ink is running out. (Continues operation)	Prepare the new ink S/C cards and ink packs.	文章 6.1.1 Replacing ink packs
5	[******] S/C InkEnd	Ink has run out. (Stops operation)	Replace with new ink S/C cards and ink packs.	文章 6.1.1 Replacing ink packs
6	[******] No S/C Card	No S/C card is inserted. (Stops operation)	Insert an S/C card.	文章 3.3 Installing ink packs
7	7 [******] NotOriginal • The inserte corrupted. • The S/C ca the wrong ! • Reading S/ information (Stops operat		 Insert a non-corrupted S/C card. Insert the S/C card into the correct location. Re-insert the S/C card. 	区 6.1.1 Replacing ink packs
8	Full WasteInkTank	The waste fluid tank is full. (Stops operation)		义 6.3 Disposal of waste fluids
9	Life Times [Head] The operational life of the print head has almost expired. (Continues operation)		Contact your local MUTOH dealer.	_
10	10 Life Times [Pump] The operational life of the pump motor has almost expired. (Continues operation)		Contact your local MUTOH dealer.	_
11	Life Times [CR Motor]	The life CR motor is almost expired. (Continues operation)	Contact your local MUTOH dealer.	_
12	12 Life Times The operational limeter has almost (Continues operations)		Contact your local MUTOH dealer.	_
13	Set Height to Low The head height is set to High during the procedure to turn the power OFF. (Stops operation)		Return the head height to Low.	T 3.2.2 Turning the power OFF
14	Don't Start Sleep Mode Sleep Mode cannot be performed because the printer is not normal condition. (Stops operation)		Return the product normally.	LF 5.7.1 Timer Setting menu LF 5.7.2 Sleep Mode Start menu

- The color inside [******] in the error display represents the ink color with a problem. If the error applies to all ink packs, [ALL] is displayed.
- If the "No Ink" and "No Card" errors occur simultaneously, "No Card" is displayed.

7.2.3 Data error display and solutions

This section describes data error messages and remedies.

A data error appears if there is a failure in data communication between your PC and the printer. If a data error occurs, the following error message appears on the operation panel of the printer and operation stops.

When the cause of the error is solved, the printer starts operating again.

No.	Display	Description	Remedy	Reference
1	I** Error []	An error occurred when receiving data.	1 1 4 1	至 4.3 Menu setups on the operation panel



• "***" in the error message is the code no. that indicates what type of error occurred.

7.2.4 Command error display and remedies

This section describes command errors and remedies.

A command error is displayed if a certain failure occurs during analysis of the command data sent from your PC to the printer.

If a command error occurs, the following error message appears on the operation panel of the printer and operation stops.

When the error is solved, the printer starts operating again.

No.	Display	Description	Remedy	Reference
1	MH** Error []	An invalid command has been sent from the computer.	DC 1.1	图 4.3 Menu setups on the operation panel

- "***" in the error message is the code no. that indicates what type of error occurred.
- The command code representing the error occurred may be indicated in [].
- For the settings on your PC side, refer to the Operating Manual attached with your PC.

7.2.5 Error requiring restart

This section describes errors requiring restart and remedies.

An error requiring restart is displayed if a fatal operational failure such as the following occurs.

- When an obstacle that prevents printing occurs
- When a problem occurs with the electrical circuit, such as the PCB, motor and sensor of the printer
- When a failure in the printer control program occurs

If an error requiring restart occurs, the printer stops operating after performing the following operations.

- 1. The drive power automatically shuts down.
- 2. All lamps on the operation panel blink, and the buzzer rings continuously.
- 3. The error message is displayed on the operation panel.

Pressing any key on the operation panel stops the beeping.

For an error requiring restart, operation will return to normal after removing the cause of the error and restarting the printer.

If the same error continues to be displayed, contact the your local MUTOH dealer.

Be sure to tell us the code no. of the error message when you contact us.

No.	Display	Description	Remedy	Reference
1	E** Error []	A problem that does not have a remedy has occurred.	1. Remove obstacles such as paper scraps in the drive system.	了.3 The media is jammed
			2. Confirm that the replaced items are correctly attached.	に置 6.1 Replacing consumable components
			3. Turn OFF the printer power, and turn it ON again after 10 seconds or longer.	


- "***" in the error message is the code no. that indicates what type of error occurred.
- The command code representing the error occurred may be indicated in [].
- For the settings on your PC side, refer to the Operating Manual attached with your PC.

7.3 The media is jammed


When the set media is jammed, follow the procedure below to remove it.

- 1. Turn OFF the power of the printer.


 **\tilde{\text{LF}} 3.2.2 Turning the power OFF
- 2. Open the front cover.

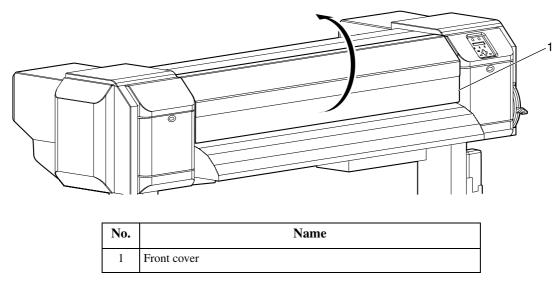


3. Move the print head section from the top of the media to the right.

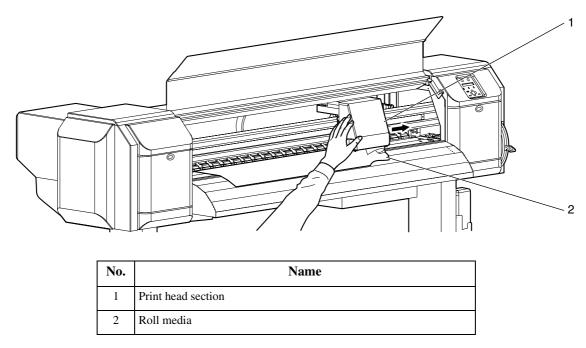


4. Raise the media loading lever.

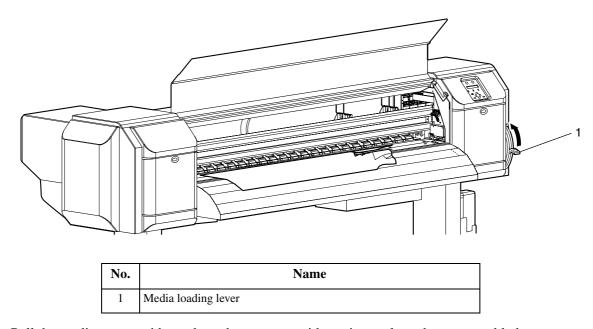

5. Pull the media to your side, and cut the torn part with cutting tools such as a razor blade.

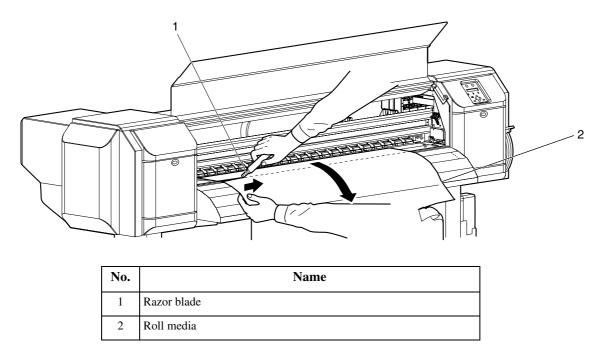

6. Turn the flanges of the roll media holders and wind roll media.

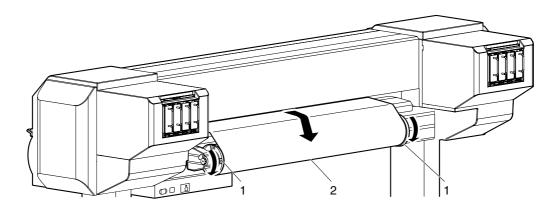

No.	Name
1	Flanges
2	Roll media

7. If paper dust or pieces of paper remain inside the printer, remove them.

8 Appendix

This chapter describes specifications and included components with this printer.

8.1 Product specifications

8.1.1 Printer specifications

]	Item	Specification
Model name		VJ-1618
Printing method		On-demand piezo drive system
Drive system		Firmware servo/DC motor drive
Media feed system		Multipoint pressurizing grid roller system
Media fixing system	1	Pressurization roller down system by manual lever
Media feed/ejection		Rear feed/Front ejection
Outer diameter of th	e roll media	150 mm or less
Weight of roll media	ı	30 kg or less
Maximum media ler	ngth	50 m
Maximum media wi	dth	1,625 mm
Maximum media thi	ckness	0.3 mm
Maximum print wid	th	1,615 mm
Print margin		Front: Up to 15 mm, Back: 5 mm, Left: 5 mm to 25 mm, Right: 5 mm to 25 mm
Media cut system		Horizontal manual cut system
Head height adjustm	nent	Normal (Low)/High (two-step adjustment)
CPU		64-bit RISC CPU
Memory		256 MB
Command		MH-RTL (RTL-PASS)
Interface		Network interface (Ethernet IEEE 802.3)
Ink	Supply system	Supplied through tubes from each of the four color, eight ink packs
	Ink pack	Black, Cyan, Magenta, Yellow: 880 ml ± 5 ml
Environmental condition	Operating condition	Temperature: 20 °C to 32 °C Humidity: 40% to 60%, No condensation
	Printing accuracy coverage	Temperature: 22 °C to 30 °C Humidity: 40% to 60%, No condensation
	Change Rate	Temperature: within 2 °C per one hour Humidity: within 5 % per one hour
	Archiving condition (Ink filled)	When sleep mode is ON Temperature: 10 C to 40 C Humidity: 20 % to 80 %, No condensation Storage life: four days (32 °C or higher)
Power	Power voltage	AC 90 V to AC 132 V / AC 198 V to AC 264 V
	Frequency	50 Hz/60 Hz ± 1 Hz

Item		Specification
1		MAIN: Max. 900 W (Heater ON) HEATER: Max. 1000 W (Heater ON)
	Standby	MAIN: 100 W or less (When the idle heat is turned OFF) HEATER: 1 W or less (When the idle heat is turned OFF)
Outer diameter	Height	1,262 mm (including the stand)
	Width	2,968 mm
	Depth	984 mm
Weight		230 kg (including the stand)

8.2 Interface specification

This section describes each type of interface specifications supported by this product.

8.2.1 Network interface specification

Item	Specification	
Network type	Ethernet IEEE802.3	
Network I/F	10BASE-T/100BASE-TX Automatic transfer type (RJ-45 Connector twist pair cable) MDI/MDI-X Automatic transfer	
Corresponding protocol	TCP/IP	

8.3 Options/Supply list

For more information about the options and the supply items, contact your local MUTOH dealer.